

Document 215% Continuous document Validity off Page 1 of 2

Document GF

GF54.15-P-1256-13LE Fuse assignment of fuse box in left of cockpit

F1/7 Left instrument panel fuse box

X Direction of travel

The diagram shows a rectangular fuse box layout. On the left side, there are two circular terminals. A horizontal line extends from the top terminal to a vertical column of 12 slots, numbered 92 to 102. Another horizontal line extends from the bottom terminal to a second vertical column of 12 slots, numbered 103 to 113. On the right side, there are two vertical slots. An arrow labeled 'X' points to the left, indicating the direction of travel. A label 'F1/7' is located at the bottom right of the diagram, pointing to the right-hand vertical column of slots.

92	103
93	104
94	105
95	106
96	107
97	108
98	109
99	110
100	111
101	112
102	113

Document 200% Continuous document Validity off Page 1 of 2

Fuse	Clamping device	Cable ID (cable fused)	Fused function	Rating in amperes (A)
f92	30g	4.0 RD	<ul style="list-style-type: none"> Left front seat control unit (N32/1) 	40
f93	30g	0.75 RDWH	<ul style="list-style-type: none"> Restraint systems control unit (N2/7) <p>Valid for model 216, model 221 as of 1.9.08 with code (494) USA version:</p> <ul style="list-style-type: none"> Weight sensing system (WSS) control unit (N110) <p>Valid for model 221 up to 31.8.08 with code (494) USA version:</p> <ul style="list-style-type: none"> Weight Sensing System (WSS) control unit (N2/13) 	7.5
f94	30g	0.5 RDWH	<p>Valid for code (238) Active Lane Keeping Assist, for code (476) Automatic lane recognition, for code (513) Speed Limit Assist or for code (608) Adaptive Highbeam Assist:</p> <ul style="list-style-type: none"> Multifunction camera (A40/11) 	5
f95	30g	-	<ul style="list-style-type: none"> Spare 	-
f96	30g	0.5 RDWH	<p>Valid for code (475) Tire pressure monitor (Premium):</p> <ul style="list-style-type: none"> TPM [RDK] control unit (N88) 	5
f97	30g	0.75 RDWH	<p>Valid for model 221 with code (864) Rear entertainment system:</p> <ul style="list-style-type: none"> DVD player (A40/4) 	7.5
f98	30g	-	<ul style="list-style-type: none"> Spare 	-
f99	30g	0.75 RDBU	<p>Valid as of 1.6.09 without code (867) SPLITVIEW:</p> <ul style="list-style-type: none"> COMAND display (A40/8) <p>Valid as of 1.6.09 for code (867) SPLITVIEW:</p> <ul style="list-style-type: none"> SPLITVIEW display (A40/10) 	7.5
f100	30g	0.75 RDWH	<p>Valid for code (518) Media interface:</p> <ul style="list-style-type: none"> Media interface control unit (N125/1) 	5
f101	30g	1.0 RDWH	<p>Valid for model 221 with code (864) Rear entertainment system:</p> <ul style="list-style-type: none"> Left rear display (A40/5) Right rear display (A40/6) 	10
f102	30g	4.0 RD	<ul style="list-style-type: none"> Right front seat control unit (N32/2) 	40
f103	30g	0.75 RDWH	<p>Not valid for model 221.095/195:</p> <ul style="list-style-type: none"> ESP control unit (N47-5) 	7.5