

Document 215% Continuous document Validity off Page 1 of 2

Document GF

GF54.15-P-1256-12LE Fuse assignment of fuse box in right of cockpit

F1/6 Right instrument panel fuse box

X Direction of travel

The diagram shows a rectangular fuse box layout with two columns of slots. The left column contains slots numbered 91 down to 81, and the right column contains slots numbered 80 down to 70. An arrow labeled 'X' points to the right, indicating the direction of travel. Two circular terminals are shown on the right side of the box, with the bottom one labeled 'F1/6'.

91	80
90	79
89	78
88	77
87	76
86	75
85	74
84	73
83	72
82	71
81	70

Document 200% Continuous document Validity off Page 1 of 2

Fuse	Clamping device	Cable ID (cable fused)	Fused function	Rating in amperes (A)
f70	30	4.0 RD	<ul style="list-style-type: none"> <li>Right door control unit (N69/2) (model 216)</li> <li>Right front door control unit (N69/2) (model 221)</li> </ul>	40
f71	30	1.5 RD	<b>Valid for code (889) Keyless Go:</b> <ul style="list-style-type: none"> <li>KEYLESS-GO control unit (N69/5)</li> </ul>	15
f72	30	0.75 RD	<b>Valid for model 221.095/195:</b> <ul style="list-style-type: none"> <li>Pyrotechnical separator (K88)</li> </ul>	7.5
f73	30	0.5 RD 0.75 RD	<b>Valid for code (498) Japanese version:</b> <ul style="list-style-type: none"> <li>COMAND controller unit (A40/3)</li> </ul> <b>Valid for code (359) TELE AID emergency call system:</b> <ul style="list-style-type: none"> <li>Emergency call system control unit (N123/4)</li> </ul>	5
f74	30	4.0 RD	<b>Valid for model 216, model 221 with code (881) Remote trunk closing (RTC):</b> <ul style="list-style-type: none"> <li>TLC control unit (N121)</li> </ul>	30
f75	30	0.75 RD 1.0 RD	<b>Valid for model 221.095/195:</b> <ul style="list-style-type: none"> <li>Battery management system control unit (N82/2)</li> <li>Power electronics control unit (N129/1)</li> </ul>	10
f76	30	4.0 RD 0.5 RD	<b>Valid for model 221 with engine 642.8:</b> <ul style="list-style-type: none"> <li>AdBlue® relay supply (K27/7)</li> </ul> <b>Valid for model 221.095/195:</b> <ul style="list-style-type: none"> <li>Vacuum pump relay (+) (K109)</li> </ul>	- 15
f77	30	6.0 RDBU	<b>Valid for code (811) Advanced sound system:</b> <ul style="list-style-type: none"> <li>Sound amplifier (A2/13)</li> </ul>	50
f78	30	2.5 RD 4.0 RD 1.0 RD	<b>Valid for model 221.179 with engine 275:</b> <ul style="list-style-type: none"> <li>Additional fan relay (K9)</li> </ul> <b>Valid for model 221 with engine 642.8:</b> <ul style="list-style-type: none"> <li>AdBlue® relay supply (K27/7)</li> </ul> <b>Valid for model 221.074/174 and model 216.374 with engine 157, 278:</b> <ul style="list-style-type: none"> <li>Charge air cooler circulation pump (M44)</li> </ul>	25 25 15
f79	30	0.5 RD	<b>Valid for code (551) Antitheft alarm system (ATA [EDW]):</b>	7.5

Document 200% Continuous document Validity off Page 1 of 2

		4.0 RD	<ul style="list-style-type: none"> <li>● AdBlue® relay supply (K27/7)</li> </ul>	25
		1.0 RD	<b>Valid for model 221.074/174 and model 216.374 with engine 157, 278:</b> <ul style="list-style-type: none"> <li>● Charge air cooler circulation pump (M44)</li> </ul>	15
f79	30	0.5 RD	<b>Valid for code (551) Antitheft alarm system (ATA [EDW]):</b> <ul style="list-style-type: none"> <li>● Alarm signal siren (H3/1)</li> </ul>	7.5
f80	30	4.0 RD	<ul style="list-style-type: none"> <li>● Left door control unit (N69/1) (model 216)</li> <li>● Left front door control unit (N69/1) (model 221)</li> </ul>	40
f81	30	2.5 RD	<b>Valid for model 216:</b> <ul style="list-style-type: none"> <li>● Rear control unit (N22/6)</li> </ul>	30
		4.0 RD	<b>Valid for model 221:</b> <ul style="list-style-type: none"> <li>● Left rear door control unit (N69/3)</li> </ul>	40
f82	30	2.5 RD	<b>Valid for model 216:</b> <ul style="list-style-type: none"> <li>● Rear control unit (N22/6)</li> </ul>	30
		4.0 RD	<b>Valid for model 221:</b> <ul style="list-style-type: none"> <li>● Right rear door control unit (N69/4)</li> </ul>	40
f83	30	2.5 RD	<ul style="list-style-type: none"> <li>● Intelligent servo module for DIRECT SELECT (A80)</li> </ul>	30
f84	30	6.0 RDGN	<b>Valid for code (811) Advanced sound system:</b> <ul style="list-style-type: none"> <li>● Digital sound processor (A2/69)</li> </ul>	20
f85	30	1.0 RD	<b>Valid for AMG:</b> <ul style="list-style-type: none"> <li>● Illuminated door sill moldings</li> </ul>	10
f86	30	-	<ul style="list-style-type: none"> <li>● Spare</li> </ul>	-
f87	30	-	<ul style="list-style-type: none"> <li>● Spare</li> </ul>	-
f88	30	-	<ul style="list-style-type: none"> <li>● Spare</li> </ul>	-
f89	30	-	<ul style="list-style-type: none"> <li>● Spare</li> </ul>	-
f90	30	2.5 RD	<b>Valid for code (228) stationary heater:</b> <ul style="list-style-type: none"> <li>● STH heater unit (A6) (model 216)</li> <li>● STH or HB heater unit (A6) (model 221)</li> </ul>	20
f91	30	0.5 RD	<b>Valid for code (228) stationary heater:</b> <ul style="list-style-type: none"> <li>● STH radio remote control receiver (A6/1)</li> </ul> <b>Valid for model 221.095/195:</b> <ul style="list-style-type: none"> <li>● Front SAM control unit with fuse and relay module (N10/1)</li> </ul>	5