


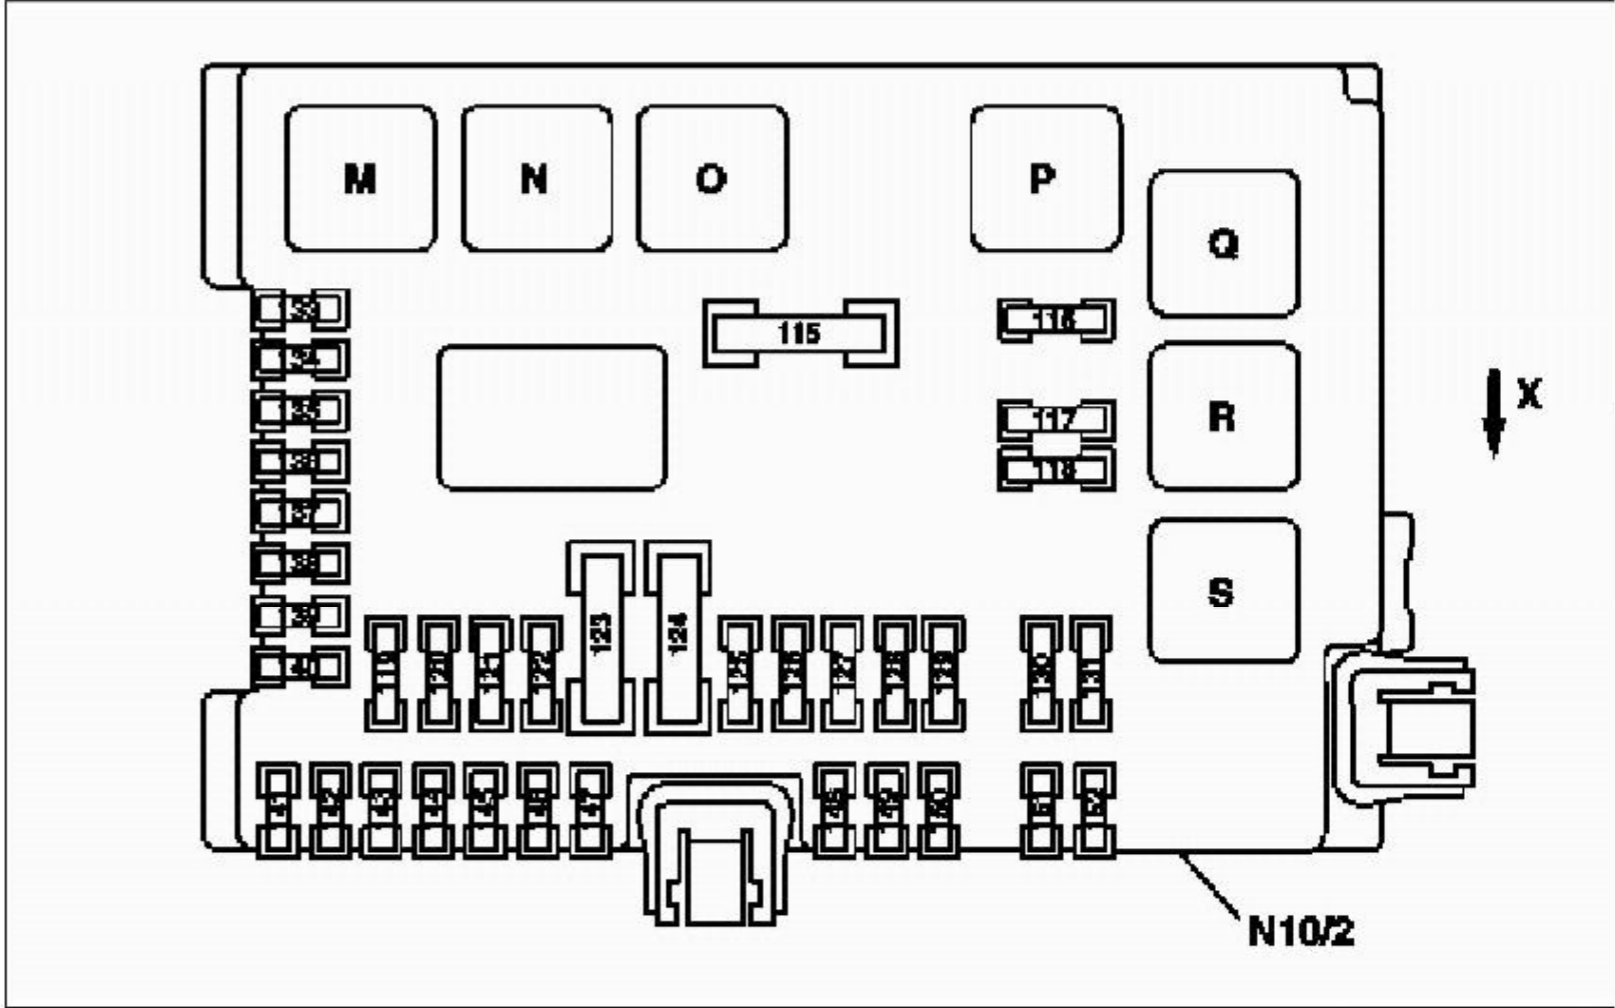
Document 265% Continuous document Validity off Page 1 of 1

Document

GF54.15-P-1257-04LE	Relay assignment of fuse and relay box in trunk	 GF
---------------------	---	--

N10/2 Rear SAM control unit with fuse and relay module

X Direction of travel



N10/2

Document 265% Continuous document Validity off Page 1 of 1

Document P54.15-27

Socket	Designation
M	Circuit 15 (2) / spare 1 relay (changeover contact) (N10/2kM)
N	Terminal 15R relay (N10/2kN)
O	Power outlet relay (N10/2kO)
P	Heated rear window relay (N10/2kP)
Q	<p><b>Valid for engine 156, 157, 275, 278, 629:</b> Circulation pump relay (N10/2kQ)</p> <p><b>Valid for model 221.095/195:</b> Power electronics circulation pump relay 2 (K108/1)</p>
R	Cigar lighter relay (N10/2kR)
S	<p><b>Not valid for model 221.095/195, valid for engine 642 without engine 642.8:</b> Fuel pump relay (N10/2kS)</p> <p><b>Valid for engine 642.8 and engine 651 as of 1.6.11:</b> Connected through the fuel pump (N10/2kS): Refrigerant compressor magnetic clutch (A9y1)</p> <p><b>Valid for model 221.095/195:</b> Power electronics circulation pump relay 1 (K108)</p>

23:47 11/03/2014