


P88.20-2777-09

- 1 Rear bumper
- 2 Nuts
- 3 Bolts
- 4 Bracket
- 7 Wiring harness


- 8 Trunk floor paneling
- 9 Hinge lever passage frame
- 10 Side trunk paneling
- 12 Bracket
- E18/4 Right luggage compartment lamp
- E18/5 Left luggage compartment lamp

- 1 Rear bumper
- 13 Bolts

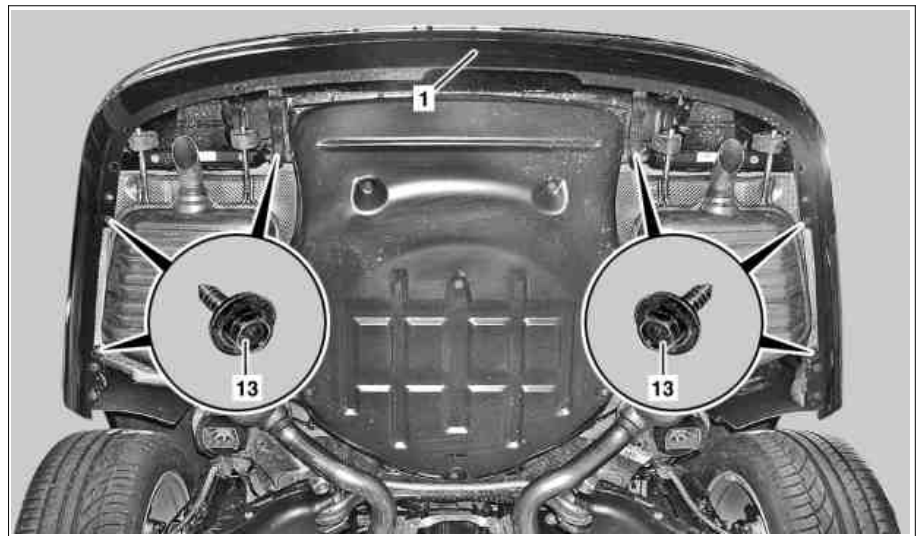

P88.20-2778-05

- 1 Rear bumper
- 14 Bolts
- 15 Rear fender paneling
- 16 Expansion clip
- 18 Hose

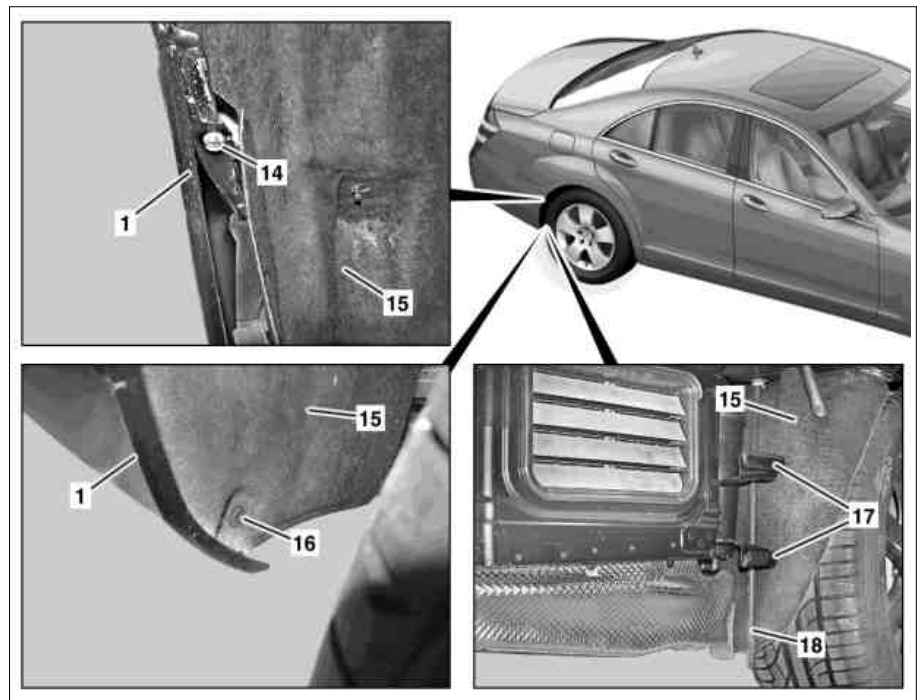


P88.20-2779-06

| | | | |
|-------------------------|--|---|--|
| | <p>Remove/install</p> <p>Information on preventing damage to electronic components due to electrostatic discharge</p> | | <p>AH54.00-P-0001-01A</p> |
| <p>⚠ Danger!</p> | <p>Risk of death caused by vehicle slipping or toppling off of the lifting platform.</p> | <p>Align vehicle between columns of vehicle lift and position four support plates at vehicle lift support points specified by vehicle manufacturer.</p> | <p>AS00.00-Z-0010-01A</p> |
| <p>1</p> | <p>Lift vehicle on lifting platform.</p> | | |
| <p>2</p> | <p>Remove trunk floor paneling (8)</p> | | |
| <p>3</p> | <p>Loosen left and right side paneling in trunk (10) and connect</p> | <p> Do not bend hinge lever passage frame (9), the plastic material can discolor. See: ↓ Remove paneling in trunk</p> | <p>AR68.30-P-4600SX</p> |
| <p>4</p> | <p>Disconnect electrical connector from wiring harness (7)</p> | | |
| <p>5</p> | <p>Remove mount (4) and mount (12) and lay down to side</p> | <p> Do not disconnect connectors</p> | |
| <p>6</p> | <p>Unscrew bolts (3) in left and right rear fender</p> | | |
| <p>7</p> | <p>Unscrew nuts (2) inside of rear center section</p> | | |
| <p>8</p> | <p>Unscrew bolts (13) at bottom of rear bumper (1).</p> | | |
| <p>9</p> | <p>Loosen left and right rear fender paneling (15) with mounting wedge until bolt (14) is accessible.</p> | <p> Mounting wedge</p> | <p>*110589035900</p> |
| <p>10</p> | <p>Remove bolts (14)</p> | | |
| <p>11</p> | <p>Remove expansion clip (16) from rear fender paneling (15) on left and right</p> | | |
| <p>12</p> | <p>Remove rear bumper (1)</p> | <p> Installation: Guide hose (18) into bracket on rear bumper (1).</p> | |
| <p>13</p> | <p>Guide wiring harness (7) through opening in rear center section.</p> | | |
| <p>14</p> | <p>Install in the reverse order</p> | | |
| <p>15</p> | <p>Check gaps on rear bumper (1), adjust if necessary</p> | <p> See: ↓ Gap dimensions on hoods, doors and lids Trunk lift to bumper, dimension "L" Feeler gauge</p> | <p>AR60.00-P-0700-01SX *BE60.00-P-1003-01R *129589032100</p> |


Check values for gaps

| Number | Designation | Model 221 |
|--------|-------------|-----------|
|--------|-------------|-----------|

| | | | | | |
|--------------------|---------------|---|---------------|----|-------------------------|
| BE60.00-P-1003-01R | Gap dimension | Trunk lid to rear fender, top | Dimension "J" | mm | 4 (±0.5) |
| | | Trunk lid to rear lamp unit | Dimension "K" | mm | 4 (±0.5) |
| | | Trunk lid to bumper | Dimension "L" | mm | 5.5 (±1.5) |
| | | Rear fender to rear lamp unit | Dimension "M" | mm | 2.5 (±0.5) |
| | | Trunk lid license plate panel to rear lamp unit | Dimension "N" | mm | 4 (±0.5) |
| | | See picture | | | AR60.00-P-0700-01S X |

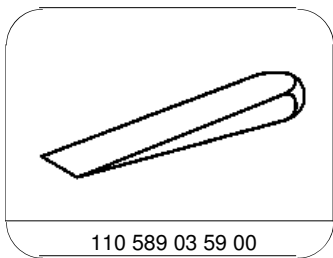

Mounting wedge

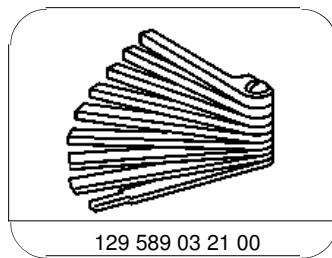

Feeler gauge