
Shown on model 221


Fuse box cover	
Insulation mat	
Screw	
Cover below dashboard	
Bracket	
Electrical connectors	
Additional battery	
Central gateway control unit	

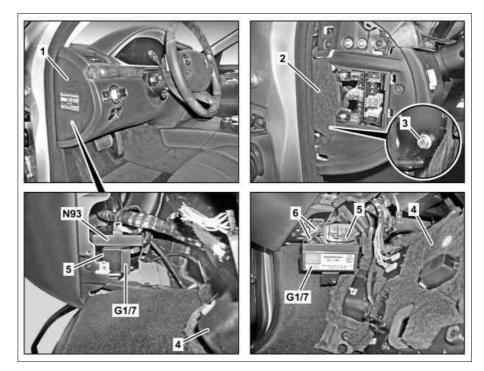

P54.10-2990-06

21.4.08

XX	Remove/install		
	Notes on battery		AH54.10-P-0001-01A
i	Notes on AGM battery		AH54.10-P-0002-01A
1	Unclip fuse box (1) on instrument panel	R	*115589035900
2	Take out insulation mat (2)		
3	Loosen cover under instrument panel (4) and place to one side with electrical lines connected	i Only disconnect the electrical connector of the left front footwell lamp.	AR68.10-P-1500SX
4	Unscrew bolt (3)		
5	Remove bracket (5) with additional battery (G1/7) and central gateway control unit (N93) downwards with electrical lines connected		
6	Remove additional battery (G1/7) with electrical lines connected from the bracket (5)		
7	Disconnect electrical connectors (6) from additional battery (G1/7)		
8	Install in the reverse order		

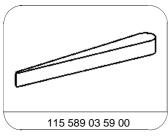

Long wedge