AR91.12-P-1620SX Remove/install rear seat backrest 20.9.06

221.0 with CODE (223) Rear bench seat with electrically adjustable outer seats with PRE-SAFE positioning MODEL


function for outer seats and outer head restraints


MODEL 221.1 with CODE (223) Rear bench seat with electrically adjustable outer seats with PRE-SAFE positioning

function for outer seats and outer head restraints


MODEL


with CODE (224) Rear individual seat design except CODE (Z07) Top protection

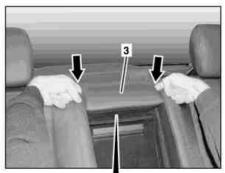


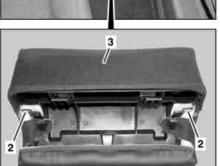



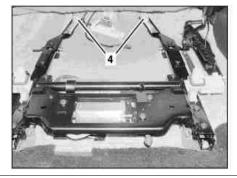

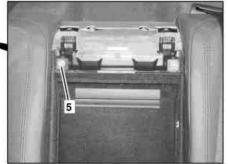

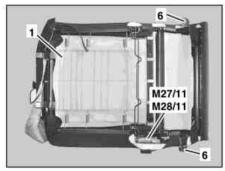

P91.12-2841-09

Shown on right rear seat backrest (1)

- Rear seat backrest
- Release lever 2
- 3 Upholstery on center armrest
- Bolts 4
- 5 Bolt
- Bracket

M27/11


M28/11

Left rear backrest angle adjustment motor Right rear backrest angle

adjustment motor





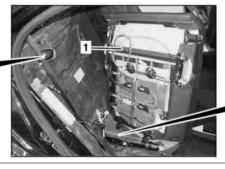



P91.12-2866-07

Shown on right rear seat backrest (1)

- Rear seat backrest
- 8 Pneumatic line (with code (406) Rear multicontour seats)
- 9 Electrical connector (with code (402) Rear deluxe seats, incl. seat heating and seat ventilation)

X54/33

Left rear multicontour backrest connector (with code (406) Rear multicontour seats)

X54/34

Right rear multicontour backrest connector (with code (406) Rear multicontour seats)

XX	Remove/install		
1	Remove left or rear seat cushion		AR91.12-P-1020SX
2	Fold down all rear head restraints		
3	Release upholstery above center armrest (3) on the release levers (2) (arrows) and remove upward	i Release the release lever (2) toward the front.	
4	Demonstration will resolution		ADC0 00 D 4400CV

5	Remove rear passenger compartment side trim panel		AR68.30-P-4780SX
6	Remove bolts (4)	Nm	*BA91.12-P-1002-03H
7	Unscrew bolts (5) from brackets (6)	Nm	*BA91.12-P-1003-03H
3	Slide rear seat backrest (1) upwards and remove		
9	Disconnect electrical connector from left rear backrest angle adjustment motor (M27/11) or from right rear backrest angle adjustment motor (M28/11)		
10.1	Disconnect left rear multicontour backrest connector (X54/33) or right rear multicontour backrest connector (X54/34) and pneumatic line (8)	On vehicles with code (406) Rear multicontour seats	
11.1	Disconnect electrical connector (9).	For vehicles with code (402) Rear deluxe seats, incl. seat heating and seat ventilation	
12	Remove rear seat backrest (1)		
13	Install in the reverse order		

Nm Rear seats

Number	Designation	Model 221
BA91.12-P-1002-03H	Bolt for rear seat backrest to seat adjustment mechanism	18
BA91.12-P-1003-03H	Bolt for rear seat backrest to rear wall Nm	18