


MODEL 221.0 except CODE (223) Rear bench seat with electrically adjustable outer seats with PRE-SAFE positioning function for outer seats and outer head restraints

MODEL 221.1  
except CODE (223) Rear bench seat with electrically adjustable outer seats with PRE-SAFE positioning function for outer seats and outer head restraints  
except CODE (224) Rear individual seat design

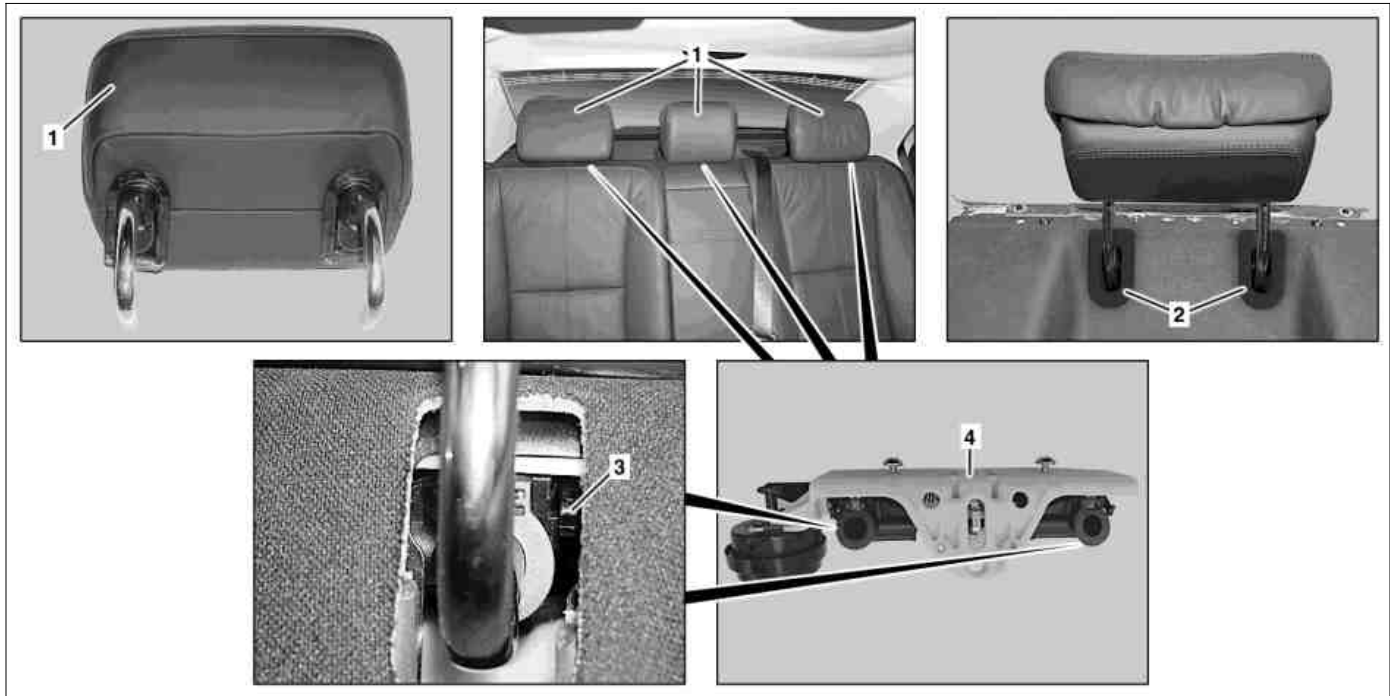


P91.16-2410-09

1 Head restraints  
2 Surrounds

3 Release lever

4 Head restraint mechanism

	<b>Remove</b>		
	The head restraints (1) can be removed individually.		
1	Assemble head restraint (1) to be removed		
2	Unclip coverings (2)		*110589035900
3	Press left and right release lever (3) down with a suitable screwdriver and pull head restraint (1) out of head restraint mechanism (4)		The release levers (3) are located on the outer sides of the head restraint (1).
	<b>Install</b>		
4	Insert head restraint (1) into head restraint mechanism (4)		Head restraint (1) must latch audibly on both sides.
5	Assemble head restraint (1) and clip in coverings (2)		

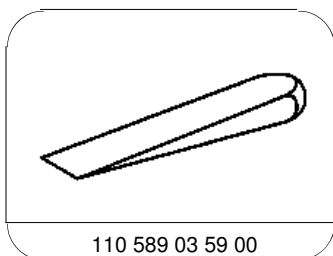

110 589 03 59 00

Mounting wedge