

P68.30-3215-09

- 1 Edge guard
- 2 Upper B-pillar paneling
- 3 Bottom B-pillar paneling
- 4 Cap

- 5 Nut
- 6 Cover
- 7 Belt end fitting
- 8 Seat belt

- 9 Guide
- 10 Pin
- 11 Door sill molding



Shown on vehicle with code (494) USA  
 B48/3 Belt Tension Sensor



P91.60-3013-12

**Modification notes**


9.2.06	Electrical connector for belt tension sensor added	Step 5.1	
--------	--	----------	--

 	Remove/install		
1	Move front seat backrest and front seat completely toward front.		
2	Loosen edge guard (1) at front and rear in area of upper B-pillar (2) and lower B-pillar paneling (3).		

3	Loosen cap (4) and unscrew nut (5).		
4	Unclip cover (6)		
5.1	Disconnect electrical connectors from belt tension sensor (48/3)	On front passenger seat and vehicle with code (494) USA version.	
6	Remove belt end fitting (7) from front seat	<b>i</b> <b>Installation:</b> Do not twist seat belt (8). Nm	*BA91.40-P-1001-01O
7	Press off upper B-pillar paneling (2) with mounting wedge and remove	<b>i</b> <b>Installation:</b> The guide (9) must be inserted into the bolts (10). S	*110589035900
8	Guide seat belt (8) through upper B-pillar paneling (2)		
9	Remove front door sill molding (11)	Vehicles without code (Z07) Top protection Vehicles with code (Z07) Top protection	AR68.30-P-4100SX AR68.30-P-4100SXS
10	Press lower B-pillar paneling (3) off of retaining clips with mounting wedge	<b>i</b> <b>Installation:</b> Ensure that retaining clips are seated properly. S	*110589035900
11	Remove lower B-pillar paneling (3)		
12	Install in the reverse order		

**Nm** Seat belts/emergency tensioning retractors

Number	Designation		Model 221
BA91.40-P-1001-01O	Screw on belt end fitting	Nm	32

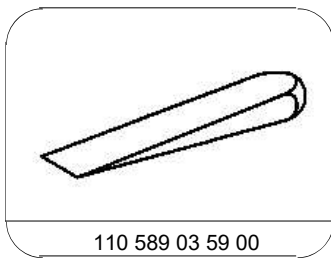

110 589 03 59 00

Wedge tool