


P82.35-2315-09

1 Bracket
2 Washing water reservoir

3 Washer fluid hose
4 Electrical connector

M5/1 Windshield washer fluid pump

☒ ☒	Remove/Install		
1	Remove the rear fender liner in the right front fender		AR88.10-P-1300V
2	Unclip one side of the bracket (1) for the window washer fluid pump (M5/1) from the washer fluid reservoir (2)		
3	Using an assembly wedge, press windshield washer fluid pump (M5/1) from washer fluid reservoir (2)	<p>i Collect washer fluid which flows out.</p> <p>⚠</p>	*115589035900
4	Detach washer fluid hose (3) from the windshield washer fluid pump (M5/1)	<p>i Collect washer fluid which flows out.</p>	
5	Disconnect the electrical plug (4) from the windshield washer fluid pump (M5/1) and remove the windshield washer fluid pump (M5/1)	<p>i Installation: Install a new gasket for the windshield washer fluid pump (M5/1) in the windshield washer fluid reservoir (1).</p>	
6	Install in the reverse order		
7	<p>AP</p> <p>Fill washer fluid reservoir (1)</p> <p>Windshield washer system - inspect fluid level, adjust to correct level</p>		AP82.35-P-8210N
8	Perform function check on windshield washer system	<p>i Switch on ignition and check the function of the windshield washer fluid pump (M5/1) by pressing the switch for the windshield washer system. A sufficient amount of water must come out of the windshield washer nozzles.</p>	

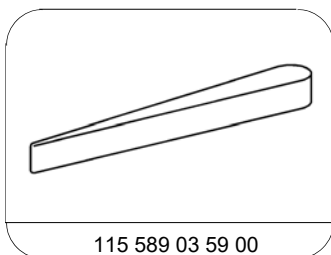

115 589 03 59 00

Long wedge