


## MODEL 171.4 up to Model Year 8

F32 Front prefuse  
 F34 Interior fuse box  
 N10/1 Driver-side SAM control unit with fuse and relay module  
 N10/2 Rear SAM control unit with fuse and relay module

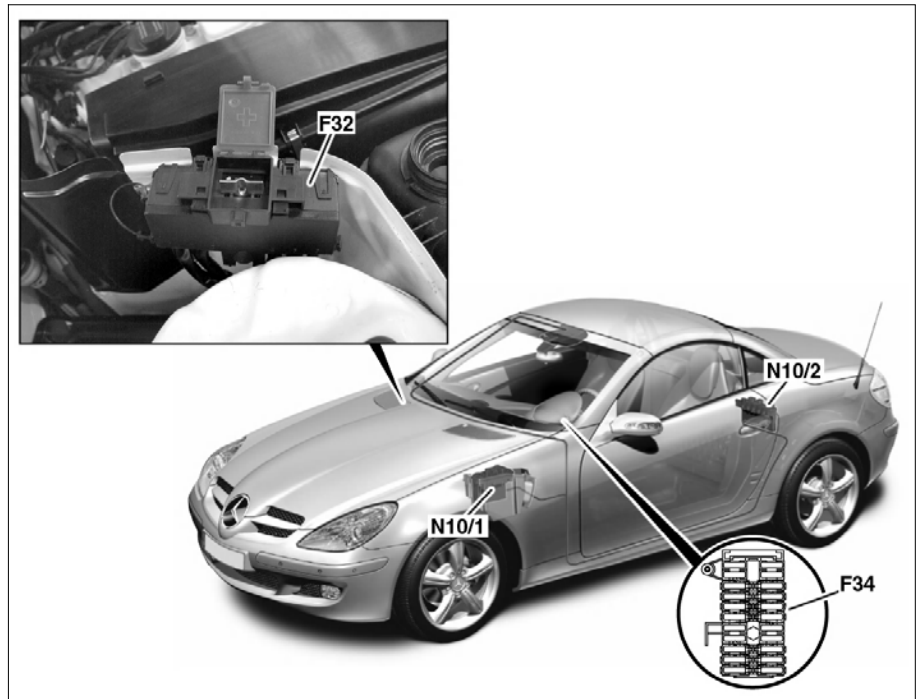

P54.15-2548-06

	Fuse assignment of fuse and relay box in engine compartment, left		GF54.15-P-1256-03SK
	Relay assignment of fuse and relay box in engine compartment, left		GF54.15-P-1257-03SK
	Fuse assignment of fuse and relay box in trunk		GF54.15-P-1256-06SK
	Relay assignment of fuse and relay box in trunk		GF54.15-P-1257-04SK
	Fuse assignment of fuse box in interior compartment on driver's side		GF54.15-P-1256-04SK
	Fuse assignment of front prefuse box		GF54.15-P-1256-07SK