


MODEL 222.0/1/9

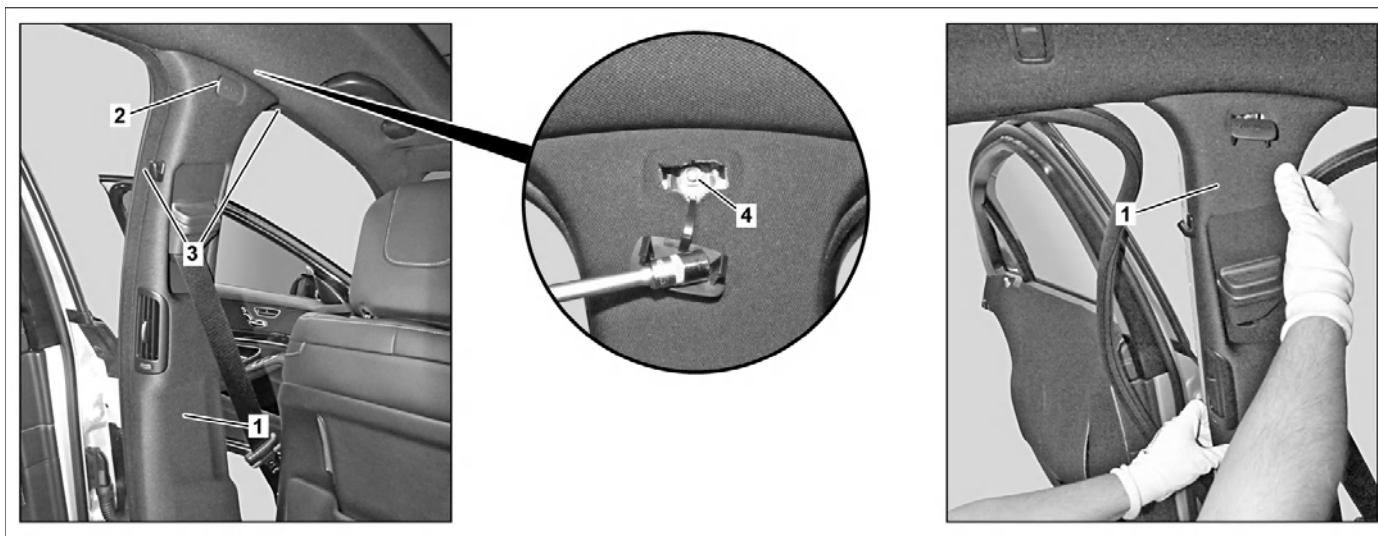


P68.30-3682-08




- 1 Top B-pillar paneling
- 2 Cover

- 3 Edge guard
- 4 Screw

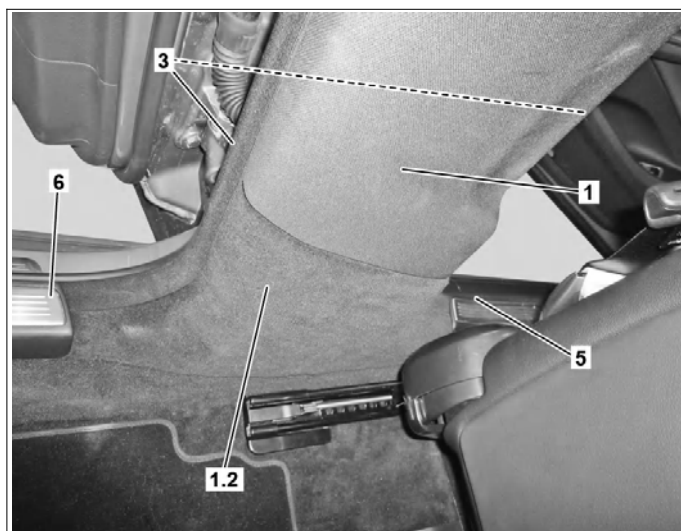- 1 Top B-pillar paneling
- 1.2 Bottom B-pillar paneling
- 3 Edge guard
- 5 Front door sill molding
- 6 Rear door sill molding



P68.30-3697-11

 	Remove/install		
1	Move front seat to end position toward front		
2	Remove edge guard (3) in area of top, lower B-pillar paneling (1, 1.2)		
3	Unclip cover (2)		
4	Unscrew nut (4)	 Nut, B-pillar trim to body	*BA68.30-P-1001-01E
5	Unclip top B-pillar paneling (1)		
6	Remove belt end fitting		AR91.40-P-1030-02LF
7	Guide seat belt through opening on top B-pillar paneling (1)		
8	Remove top B-pillar paneling (1) from vehicle interior		
9	Remove door sill (5, 6)	When removing bottom B-pillar paneling (1.2)	
10	Unclip bottom B-pillar paneling (1.2), lift slightly and remove upward		
11	Transfer air vent	When replacing top B-pillar paneling (1)	

12	Install in the reverse order		
----	------------------------------	--	--

Nm Paneling, trim piece

Number	Designation		MODEL 222
BA68.30-P-1001-01E	Nut, B-pillar trim to body	Nm	5