


MODEL 216.386

MODEL 221.0 /1 except CODE (487) Active Body Control (ABC)

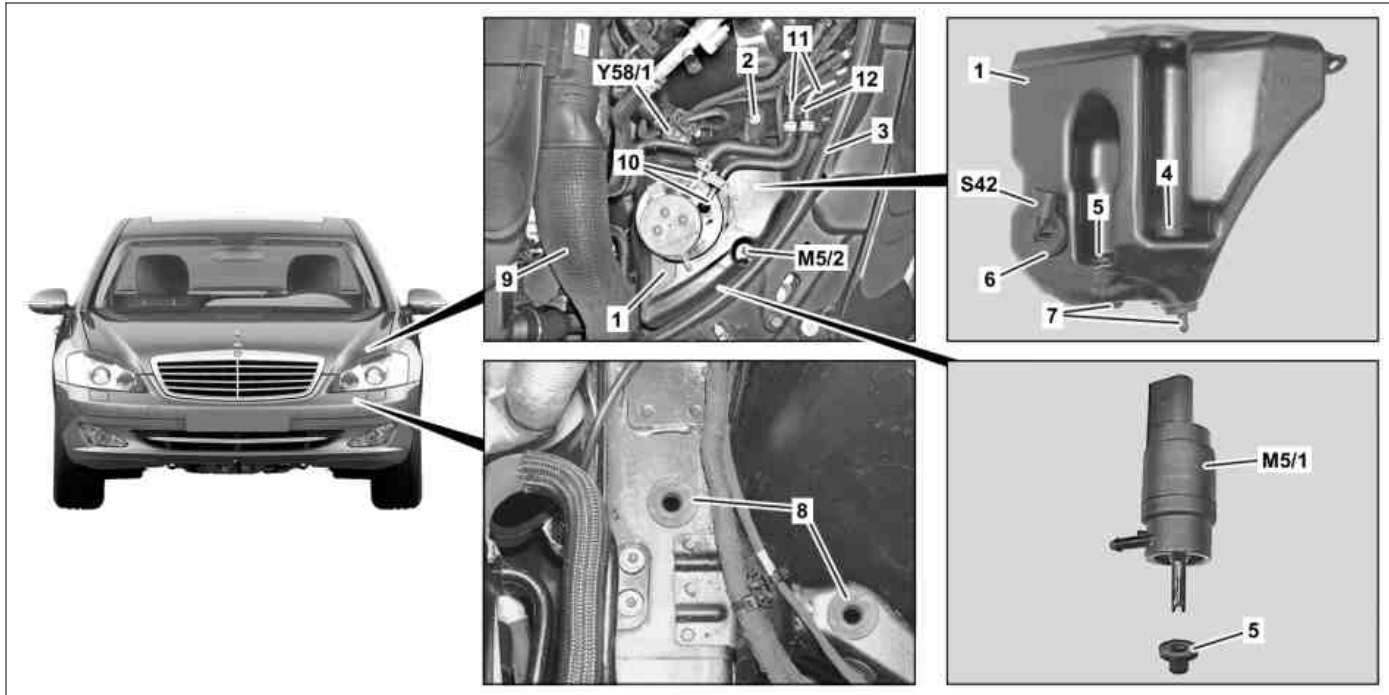

P82.35-2587-09

Shown on model 221 with code (600) Headlamp cleaning system and code (875) Heated windshield washer system

- 1 Washing water reservoir
- 2 Nut
- 3 Frame seal
- 4 Seal (model 221 with code (600) Headlamp cleaning system, model 216.386)
- 5 Gasket
- 6 Gasket
- 7 Pin

- 8 Grommets
- 9 Engine air intake duct
- 10 Heat exchanger (for code (875) Heated windshield washer system)
- 11 Coolant lines (for code (875) Heated windshield washer system)
- 12 Clip (for code (875) Heated windshield washer system)

 
 

- M5/1 Windshield washer fluid pump
- M5/2 HCS [SRA] pump (model 221 with code (600) Headlamp cleaning system, model 216.386)
- S42 Windshield washer fluid level indicator switch
- Y58/1 Purging switchover valve (with gasoline engines)


Modification notes

3.3.08	Repair method has been revised	Step 2
--------	--------------------------------	--------

	Remove/install		
1	Remove purging switchover valve (Y58/1) from bracket and place to one side with lines connected	With gasoline engines	
2	Unclip coolant lines from wheel well, remove heat exchanger from washer fluid reservoir (1) and place to one wide with coolant lines attached.	In vehicles with code (875) heated windshield washer system	i Installation: Ensure that heat exchanger is seated correctly in washer fluid reservoir (1).
3	Remove engine air intake duct (9)		
4	Unscrew nut (2)		
5	Lift up washer fluid reservoir (1) until the detachable parts are accessible		i Installation: Insert pin (7) on bottom side of washer fluid reservoir (1) into the rubber grommets (8).
6	Unclip windshield washer fluid pump (M5/1) and place to one side with lines attached		i Collect washer fluid which flows out. i Installation: Check gasket (5) and replace if necessary.

*110589035900

7	Unclip HCS [SRA] pump (M5/2) and place to one side with lines attached	Model 221 with code (600) Headlamp cleaning system, model 216.386 i Installation: Check gasket (4) and replace if necessary. 	*110589035900
8	Disconnect electrical connector at the switch of the windshield washer system fluid level control (S42)		
9	Remove washer fluid reservoir (1)		
10	Detach windshield washer fluid level indicator switch (S42)	When replacing the washer fluid reservoir (1). i Installation: Check gasket (6) and replace if necessary.	
11	Remove heat exchanger cover from new washer fluid reservoir (1)	When replacing the washer fluid reservoir (1) on vehicles with code (875) Heated windshield washer system. 	*110589035900
12	Install in the reverse order		
13	 Fill washer fluid reservoir (1) Windshield washer system - inspect fluid level, adjust to correct level		AP82.35-P-8210SX

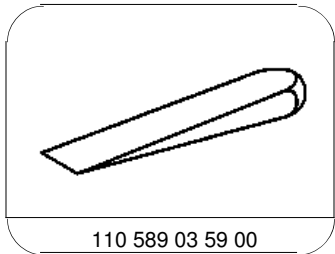

110 589 03 59 00

Mounting wedge