



P80.61-2205-09

Shown on model 221.0

A1	Instrument cluster	A85/1	Right door lock unit (model 216) Right front door lock unit (model 221)	M14/10	Fuel filler flap CL [ZV] motor
A2/12	Rear window antenna amplifier module	A85/3	Left rear door lock unit (model 221)	N3/9	CDI control unit (model 221 with diesel engine)
A2/35	Trunk KEYLESS GO antenna	A85/4	Right rear door lock unit (model 221)	N3/10	ME-SFI [ME] control unit (with gasoline engine)
A2/39	Left door Keyless Go antenna (model 216) Left rear door Keyless Go antenna (model 221)	B67/1	Left Keyless Go sensor unit (model 216) Left front keyless sensor unit (model 221)	N10/2	Rear SAM control unit with fuse and relay module
A2/41	Right door Keyless Go antenna (model 216) Right rear door Keyless Go antenna (model 221)	B67/2	Right Keyless Go sensor unit (model 216) Right front Keyless Go sensor unit (model 221)	N47-5	ESP control unit
A2/60	Center console KEYLESS-GO antenna	B67/3	Left rear Keyless Go sensor unit (model 221)	N69/1	Left door control unit (model 216) Left front door control unit (model 221)
A2/61	Interior KEYLESS GO antenna	B67/4	Right rear Keyless Go sensor unit (model 221)	N69/2	Right door control unit (model 216) Right front door control unit (model 221)
A8/1	Transmitter key	M14/7	Trunk lid CL [ZV] motor	N69/3	Left rear door control unit (model 221)
A85	Left door lock unit (model 216) Left front door lock unit (model 221)			N69/4	Right rear door control unit (model 221)
N93	Central gateway control unit			N69/5	KEYLESS-GO control unit
N121	TLC control unit (with code (881) Remote trunk closing (RTC))			N73	EIS [EZS] control unit
S2/3	KEYLESS-GO start/stop button	S62/21	Trunk lid KEYLESS GO button (Model 221 up to 30.11.06)	S88/8	Trunk lid external operation switch
		S62/26	RTC button (with code (881) Remote trunk closing (RTC))		