

- Electrical connector 1
- 2 Trim
- 3 Pneumatic lines
- 4 Vapor barriers

M25/1 Lumbar pump

Multicontour seat pneumatic pump (with code (409) Left/right front multicontour seats

Pneumatic pump for dynamic seat control (with code (432) Left and right dynamic multicontour M40/1 seat)

XX	Remove/install		
1	Switch off ignition and withdraw transmitter key or Keyless Go start/stop button from the EIS [EZS] control unit	<b>i</b> Keyless Go start/stop button only for vehicles with code (889) Keyless Go.	
2	Remove center paneling in trunk		AR68.30-P-4600SX
		Vehicles with code (Z07) Top protection	AR68.30-P-4600SXS
3	Remove lumbar pump (M25/1) or multicontour seat pneumatic pump (M40) or pneumatic pump for dynamic seat control (M40/1) with soundproofing (4)		
4	Install in the reverse order		

