


MODEL 221.0 /1

Rear paneling

Shown with code (582) Rear air conditioning

- 1 Paneling
2 Center console
3 Electrical connector
4 Rear air nozzle

N22/4 Rear air conditioning control unit
(with code (582) Rear air conditioning)

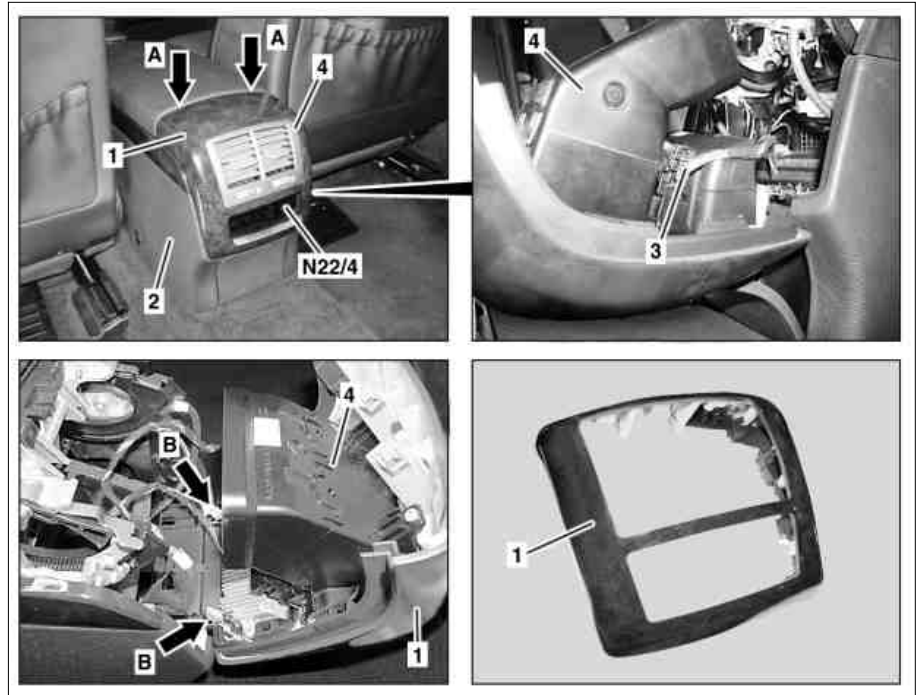

P68.20-3481-06

☒ ☒	Remove/install		
1	Manually unclip paneling (11) toward rear from center console (2) (arrows A), tilt downward and remove from center console (2).	i Installation: Insert paneling (1) from bottom into mounts (arrows B) on center console, tilt upward and clip into center console (2).	
2	Disconnect electrical connector (3) from rear center nozzle potentiometer.		
3.1 ⓘ	Disconnect electrical connector on rear air conditioning control unit (N22/4) Information on preventing damage to electronic components due to electrostatic discharge	On vehicles with code (582) Rear air conditioning	AH54.00-P-0001-01A
4.1	Remove rear air nozzle (4) from paneling (1).	When replacing paneling (1). Rechargeable drill/screwdriver	*WH58.30-Z-1007-20A
5.1	Remove stowage compartment or rear air conditioning control unit (N22/4) from paneling (1).	When replacing paneling (1). i Remove rear AC control unit (N22/4) on vehicles with code (582) Rear air conditioning, see: ↓ Remove and install rear air conditioning control and operating unit	AR83.50-P-9070SX
6	Install in the reverse order		

Commercially available tools

Number	Designation
WH58.30-Z-1007-20A	Cordless drill/driver