
**ENGINE** 275.950 in MODEL 215.376, 220.176

**ENGINE** 275.951 in MODEL 230.476

**ENGINE** 275.953 in MODEL 216.376, 221.176

**ENGINE** 275.954 in MODEL 230.477

**ENGINE** 285 in MODEL 240

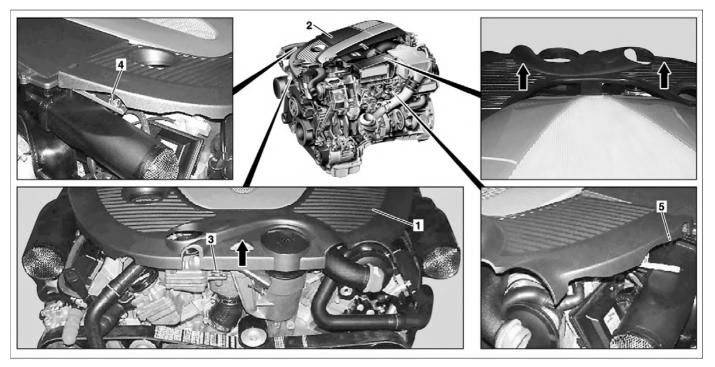

P01.10-2383-09

## Shown on engine 275

- Front engine cover
- Front engine cover

Rear engine cover


Mounting clip Bracket

8


- Mounting clip 3
- Mounting clip 5 Mounting clip
- Mounting clip
- Mounting clip


- Rear engine cover
- Mounting clip

- Mounting clip 4
- 5 Mounting clip

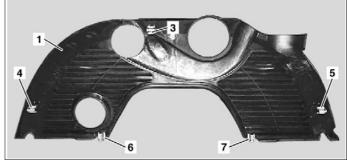

P01.10-2384-10

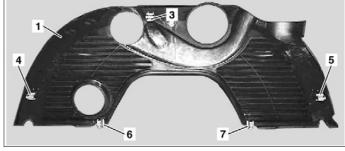

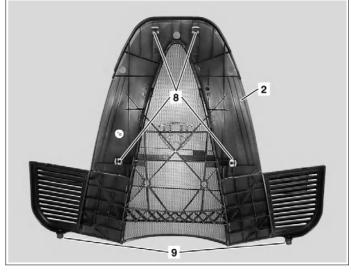

P01.10-2399-11

| XX | Remove/install  |   |
|----|---|---|
| 1  | Lift the front engine cover (1) in the area of<br>the mounting clamp (3) (arrow) and unclip the<br>mounting clamp (3) | Only lift the front engine cover (1) as far as necessary otherwise the engine cover can be damaged.                     |
| 2  | Lift the front engine cover (1) in the area of<br>the mounting clamps (4, 5) and unclip the<br>mounting clamps (4, 5) | Only lift the front engine cover (1) as far as necessary otherwise the engine cover can be damaged.                     |
| 3  | Unclip mounting clamps (6, 7)   | Grip beween the front engine cover (1) and the rear engine cover (2) with one hand and lift the front engine cover (1). |
| 4  | Remove front engine cover (1)   |   |
| 5  | Lift the rear engine cover (2) and unclip the mounting clamps (8)   | Only lift the rear engine cover (2) as far as necessary otherwise the engine cover can be damaged.                      |
| 6  | Pull out the brackets (9) from the supports on<br>the charge air coolers and remove the rear<br>engine cover (2)      | -   |
| 7  | Install in the reverse order  |   |