



P82.86-8837-31

Climate control main menu

You can:

- switch cooling with dehumidification on or off (AC OFF)
- control climate control centrally (Mono)
- adjust the Footwell Temperature
- set the Airflow for the air vents
- operate the Rear air conditioning from the front

Switching cooling with air dehumidification on/off

Cooling is operational when the engine is running, and cools according to the selected interior temperature for the vehicle. Cooling also dehumidifies the air inside the vehicle and, thereby, prevents the windows from fogging up.

WARNING

If you switch off cooling with dehumidification, the vehicle will not be cooled and the air not dehumidified in warm weather conditions. The windows can mist up faster. This could result in your no longer being able to observe the traffic conditions properly and you may cause an accident.

Condensation may collect on the underside of the vehicle when the cooler is operating.

- Select the climate control main menu in the air-conditioning function bar by turning

the COMAND controller and press to confirm.

The climate control menu opens.

- **To switch on:** select AC OFF and press .
- **To switch off:** select AC OFF and press . A tick appears.



P82.86-8838-31

Controlling climate control centrally

You can use the Mono function to set all the air-conditioning zones in the vehicle to the same settings. If the Mono function is switched on and you adjust climate control on the driver's side, these changes will also be made in all the air-conditioning zones.

- Select the climate control main menu in the air-conditioning function bar by turning the COMAND controller and press to confirm. The climate control menu opens.
- Select Mono and press . A tick appears when the function is selected.



P82.86-8839-31

The Mono function is automatically switched off if you: