AR91.40-P-1516SX Remove/install rear seat belt buckle 20.9.06

MODEL 221.0 with CODE (223) Rear bench seat with electrically adjustable outer seats with PRE-SAFE positioning function for outer seats and outer head restraints

MODEL 221.

with CODE (223) Rear bench seat with electrically adjustable outer seats with PRE-SAFE positioning function for outer seats and outer head restraints with CODE (224) Rear individual seat design



P91.40-2632-07

Seat belt buckle 2 Electrical connector 3 Bolts

XX	Remove/install		
1	Remove left or rear seat cushion	Vehicles without code (Z07) Top protection	AR91.12-P-1020SX
		Vehicles with code (Z07) Top protection	AR91.12-P-1020SXS
2	Disconnect electrical connector (2)		
3	Remove bolts (3) and remove seat belt buckle	Nm	*BA91.40-P-1007-01O
	(1)		
4	Install in the reverse order		

Nm Seat belts/emergency tensioning retractors

Number	Designation	Model 221
BA91.40-P-1007-01O	Screw on rear belt buckle Nm	32