


1 Engine cover

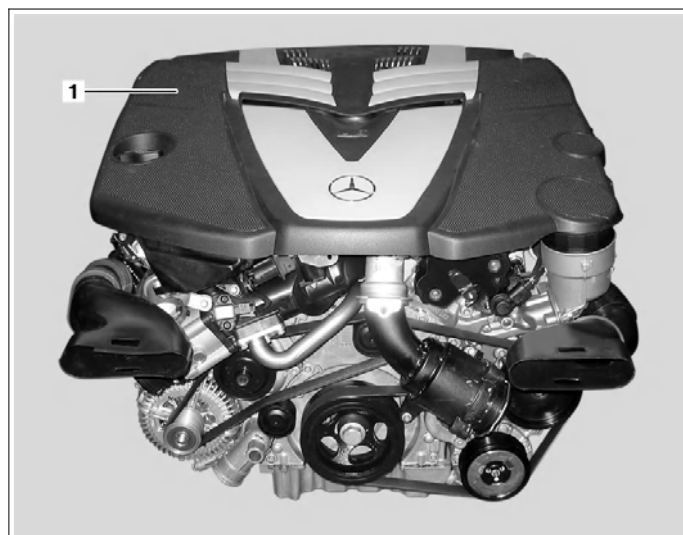

P01.10-2663-11

☒ ☒	Remove/install		
1	Raise engine cover (1) at the rear	i To pull the engine cover (1) out of the retaining clips.	
2	Raise engine cover (1) at the front	i To pull the engine cover (1) out of the retaining clips.	
3	Remove engine cover (1) upwards		
4	Install in the reverse order		