

P07.04-2445-08

Shown on engine 273

1 Bolt

B70 Crankshaft Hall sensor


Engine 272.974

1 Bolt

3 Bolt

4 Intermediate housing

B70 Crankshaft Hall sensor

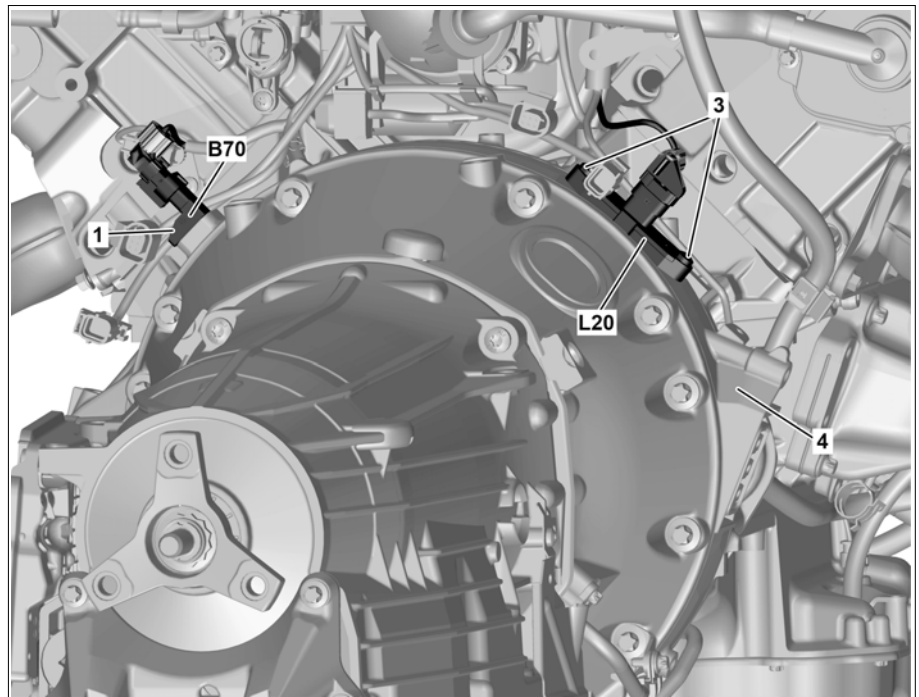

P15.12-2131-06

☒ ☒	Remove/install		
ⓘ	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Turn key in ignition lock to position "0"		
2	Remove air filter housing	Except model 221.095 /195	AR09.10-P-1150SX
3	Release and disconnect electrical connector at crankshaft Hall sensor (B70)		
4	Remove bolt (1)	Nm Except model 221.095 /195 Nm Model 221.095 / 195	*BA15.10-P-1001-03E *BA15.10-P-1004-03E
5	Remove crankshaft Hall sensor (B70) from the cylinder crankcase or intermediate housing (4)		
6	Install in the reverse order		
7	Carry out first initialization and then sensor rotor adaptation using STAR DIAGNOSIS	Only when replacing	



Connect STAR DIAGNOSIS and read out fault memory

- i** Menu guidance:
- Engine control module
 - Adaptations
 - Learning processes

AD00.00-P-2000-04A

Nm Position sensor

Number	Designation		Engine 272	Engine 273
BA15.10-P-1001-03E	Bolt, crankshaft Hall sensor to crankcase	Nm	8	8
BA15.10-P-1004-03E	Bolt, crankshaft Hall sensor to intermediate housing	Nm	8	-