

AR54.10-P-0003-01SX	End internal on-board electrical system functions		
---------------------	---	--	--

i Before disconnecting the ground lines, the voltage must be removed from the vehicle by terminating the internal on-board electrical system functions.

- 1 Move selector lever position to "P".
- 2 Switch off all electrical consumers.

- 3 Turn transmitter key in EIS [EZS] control unit to position "0".
- 4 Turn transmitter key in EIS [EZS] control unit to position "2" and wait for approx. 30 s.
- 5 Turn transmitter key in EIS [EZS] control unit to position "0" and leave in EIS [EZS] control unit.

i The internal on-board electrical system functions are now ended.