MODEL 216, 221

Shows model 221.071


01 pusher tool
1 Electrical feed line
1a Cable duct
2 Spring steel sheet
3 Guide bolts
3a Protective cap
3b Boot
4 Brake caliper

4 Brake caliper
5 Brake pad
6 Brake hose
7 Caliper support


8 Brake disk9 Dust boot


S10/4 Right rear brake pad contact

sensor

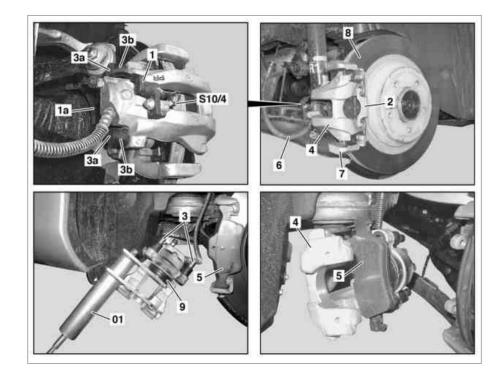

P42.10-2530-06

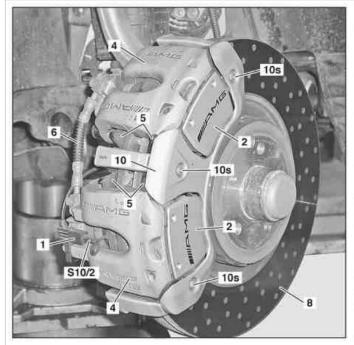

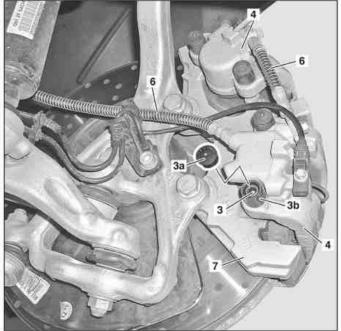

P42.10-2588-09

Shown on model 221.177, front axle

- 1 Electrical feed line
- 2 Spring steel sheet
- 3 Guide bolts
- 3a Protective cap
- 3b Boot


- Brake caliper
- 5 Brake pad
- 6 Brake hose
- 7 Caliper support
- 8 Brake disk

- 10 Cover panel
- 10 s Screw

S10/2 Right front brake pad contact sensor

Shown on model 221.056, rear axle

- pusher tool 01
- Guide bolts 3
- 3b Boot
- *4* 9 Brake caliper
- Dust boot

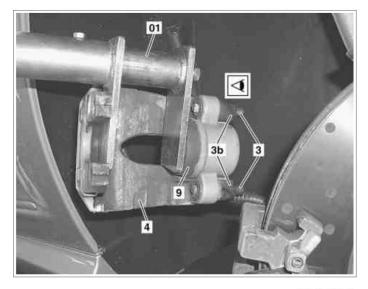

P42.10-2590-11

Modification notes

-	1.9.10	"Perform brake test on test bench" reference changed	Test sequence augmented/revised	

M, ≏	Remove/install		
⑤ Danger!	Risk of poisoning caused by swallowing brake fluid. Risk of injury caused by brake fluid coming into contact with skin and eyes.	Only pour brake fluid into suitable and appropriately marked containers. Wear protective clothing and eye protection when handling brake fluid.	AS42.50-Z-0001-01A
Danger!	Risk of injury to skin and eyes caused by handling hot or glowing objects.	Wear safety gloves, protective clothing and safety glasses, if necessary.	AS00.00-Z-0002-01A
1	Ensure vehicle idle (bus idle)	Model 221.095 / 195	AR54.10-P-2000-01SX
2	Unscrew cap of brake fluid reservoir and extract some brake fluid	** In order to prevent the brake fluid reservoir from overflowing when pressing back the brake pistons.	
	Brake fluid notes		AH42.50-P-0001-01A
0	Notes on repairs to brake system		AH42.00-P-0003-01A
3	Remove wheels		AP40.10-P-4050SX
4	Remove bolts (10s) and remove cover panel (10)	Model 216.374 /377 /379, 221.074 /077 /174 /177 /179 on front axle	
		**Installation: Replace bolts (10s). Coat ATE brake cylinder paste lightly on the contact surfaces of the bolt heads. Do not grease the thread Wipe off excess brake cylinder paste after tightening the bolts (10s).	*DD00 45 7 4070 004
5	Separate brake pad contact sensor (S10/2, S10/4) from electrical feed line (1)	ATE brake cylinder paste *BR00.45-Z-1078-06. When removing the brake pads (5) on the right-hand side of the vehicle	
6	Unclip the electrical feed line (1) from the cable retainer (1a) on the wheel carrier	When removing the brake pads (5) from the rear axle on the right-hand side of the vehicle	
7	Pry off spring steel sheet (2) and remove		
8	Pry off and remove protective caps (3a) from boots (3b)		
9	Remove guide pin (3)		*BA42.10-P-1003-12M *BA42.10-P-1004-10M
10	Remove brake caliper (4)	□ Do not subject brake hoses (6) to tensile loads or kink. Attach brake caliper (4) without tension to vehicle to relieve load on brake hose (6), otherwise the brake hose (6) will be damaged. ★ Do not detach brake hoses (6).	
11	Take out brake pads (5)	H Brake pads (5) are to be disposed of as special waste. The local authorities can provide information regarding whether disposal is also permitted as industrial waste similar to domestic waste.	

Notes on installing brake wear indicator contact sensors Check terms of the sensors Check brake pads (6) and brake disks (8) Check brake lining thickness inspect condition of brake disks (8) in complete sets if necessary. Check brake lining thickness inspect condition of brake disks (8) in complete sets if necessary. AP42.10-P-42538 AP42.10-P-40708 MR42.10-P-40708 MR42.10-P	12	Pull brake pad contact sensor (S10/2, S10/4) out of the pad backing plate of the brake pad (5)	H Only complete sets of brake pads (5) approved by Mercedes-Benz may be installed. H Installation: Insert inner brake pad (5) with riveted-on spring in brake piston. Vehicles without engine 156 /157 at rear axle: Slide outer brake pad (5) into brake caliper support (7) and install brake caliper (4). Vehicles with engine 156 / 157, at the rear axle: Insert outer brake pad (5) with spring riveted on into brake caliper (4) and mount brake caliper (4). When removing the brake pads (5) on the right-hand side of the vehicle H Installation: Replace defective brake pad contact sensor (S10/2, S10/4).	
Check brake pads (5) and brake disks (8) Check brake lining thickness inspect condition of brake disks (8) in complete sets if necessary. Check brake caliper (4) for leaks Check brake caliper (4) for leaks Check brake caliper (4) for leaks Check dust boot (9) on brake piston for damage Check dust boot (9) on brake piston for damage Check brake piston using • pusher tool (9) Press back brake piston using • pusher tool (9) Clean Clean contact surfaces of brake pads (5) on brake caliper. Clean contact surfaces of brake pads (5) on brake caliper support (7) Clean Clean contact surfaces of brake pads (5) on brake caliper support (7) Clean contact surfaces of brake pads (5) on brake caliper support (7) Clean Clean contact surfaces of brake pads (5) on brake caliper support (7) Clean contact surfaces of brake pads (5) on brake caliper support (7) Clean contact surfaces of brake pads (5) on brake caliper support (7) Clean contact surfaces of brake pads (5) on brake caliper support (7) Clean contact surfaces of brake pads (5) on brake caliper (4) and brake caliper support (7) Clean contact surfaces of brake pads (5) on brake caliper (4) and brake caliper support (7) Clean contact surfaces of brake pads (5) on brake caliper (4) and brake caliper support (7) Clean contact surfaces of brake pads (5) on brake caliper (4) or a b	0	contact sensors		AH42.10-P-0003-01A
Check brake paids (6) and brake disks (8) Check brake lining thickness inspect condition of brake disks Inspect condition of brake disks Check brake caliper (4) for leaks Check brake caliper (4) for leaks Check brake caliper (4) for leaks Check dust boot (9) on brake piston for damage Check dust boot (9) on brake piston for damage Check dust boot (9) on brake piston for damage Check dust boot (9) on brake piston for damage Check dust boot (9) on brake piston for damage The press back brake piston using paths of the pressure of t	y _o	Checking		
Check brake caliper (4) for leaks In the event of leaks: AR42.10-P-0080SX Replace rear axie brake caliper.				AP42.10-P-4253A
Check brake caliper (4) for leaks In the event of leaks: AR42.10-P-0080SX Replace rear axie brake caliper.		Inspect condition of brake disks		AP42.10-P-4258SX
The company of the problems with noise or damage to the brake paste only on the front and paphy is solely at the specified positions, otherwise the real may be problems with noise or damage to the brake asystem. 15	14	Check brake caliper (4) for leaks	Replace rear axle brake caliper.	AR42.10-P-0080SX
damage Replace rear axle brake caliper. AR42.10-P-0080SX Install new front axle brake caliper. AR42.10-P-0070SX AR42.10-P-0070SX AR42.10-P-0070SX AR42.10-P-0070SX AR42.10-P-0070SX AR42.10-P-0070SX AR42.10-P-0070SX Install new front axle brake caliper. AR42.10-P-0070SX AR42.10-P-0070SX AR42.10-P-0070SX Install new front axle brake caliper. AR42.10-P-0070SX AR42.10-P-0070SX AR42.10-P-0070SX Do not damage dust boot (9) in the process. Do not use sharp-deged or pointed to law on the caliper support (7) will be damaged. Cleaner from package AR42.10-P-0161-01B Do not damage dust boot (9) in the process. Do not use sharp-deged or pointed to law on the process. Do not use sharp-deged or pointed to solve from package AR42.10-P-0161-01B Do not damage dust boot (9) in the process. Do not use sharp-deged or pointed to solve from package BR00.45-Z-1028-04A AR42.10-P-0161-01B AR42.10-P-0161-01B Do not damage dust boot (9) in the process. Do not use sharp-deged or pointed to solve from package BR00.45-Z-1028-04A AR42.10-P-0161-01B AR42.10-P-0161-01B AR42.10-P-0161-01B AR42.10-P-0161-01B BR00.45-Z-108-04A BR0			Install new front axle brake callper.	AR42.10-P-0070SX
Install new front axle brake caliper. Press back brake piston using ● pusher tool (01) Press back brake piston using ● pusher tool (01) Press back brake piston using ● pusher tool (01) Replace rear axle brake caliper. Replace rear axle brake caliper. AR42.10-P-0080SX AR42.10-P-0070SX AR42.1	15		↓	AR42 10-P-0080SX
(01) Replace rear axle brake caliper. Replace rear axle brake caliper. AR42.10-P-0080SX AR42.10-P-0070SX *000589524300 Clean Clean contact surfaces of brake pads (5) on brake caliper (4) and brake caliper support (7) using rags Do not damage dust boot (9) in the process. Do not use sharp-edged or pointed tools, otherwise the brake caliper (4) or brake caliper support (7) will be damaged. Cleaner from package All models except model 216.374 /377 /379, 221.074 /077 /174 /177 /179 Only use the brake paste slisted in the linked description, and apply it solely at the specified positions, otherwise there may be problems with noise or damage to the brake system! MB brake paste Molykote (copper colored) MB Plastilube brake paste (brownish) Model 216.374 /377 /379, 221.074 /077 /174 /177 /179. Use ATE Plastilube paste only on the front and rear axles. ATE brake pad paste (ATE Plastilube) Replace rear axle brake caliper. AR42.10-P-0080SX AR42.10-P-0080SX *BR00.45-Z-108-04A *BR00.45-Z-108-04A *BR00.45-Z-108-04A *BR00.45-Z-1057-06A *BR00.45-Z-1057-06A *BR00.45-Z-1054-06A				
(01) Replace rear axle brake caliper. Replace rear axle brake caliper. AR42.10-P-0080SX AR42.10-P-0070SX *000589524300 Clean Clean contact surfaces of brake pads (5) on brake caliper (4) and brake caliper support (7) using rags Do not damage dust boot (9) in the process. Do not use sharp-edged or pointed tools, otherwise the brake caliper (4) or brake caliper support (7) will be damaged. Cleaner from package All models except model 216.374 /377 /379, 221.074 /077 /174 /177 /179 Only use the brake paste slisted in the linked description, and apply it solely at the specified positions, otherwise there may be problems with noise or damage to the brake system! MB brake paste Molykote (copper colored) MB Plastilube brake paste (brownish) Model 216.374 /377 /379, 221.074 /077 /174 /177 /179. Use ATE Plastilube paste only on the front and rear axles. ATE brake pad paste (ATE Plastilube) Replace rear axle brake caliper. AR42.10-P-0080SX AR42.10-P-0080SX *BR00.45-Z-108-04A *BR00.45-Z-108-04A *BR00.45-Z-108-04A *BR00.45-Z-1057-06A *BR00.45-Z-1057-06A *BR00.45-Z-1054-06A				
Clean contact surfaces of brake pads (5) on brake caliper (4) and brake caliper support (7) using rags Clean contact surfaces of brake pads (5) on brake caliper (4) and brake caliper support (7) using rags Cleaner from package All models except model 216.374 /377 /379, 221.074 /077 /174 /177 /179 Only use the brake pastes listed in the linked description, and apply it solely at the specified positions, therwise there may be problems with noise or damage to the brake system! MB brake paste Molykote (copper colored) MB Plastilube brake paste (prownish) Model 216.374 /377 /379, 221.074 /077 /174 /177 /179: Use ATE Plastilube paste only on the front and rear axles. ATE brake pad paste (ATE Plastilube) Panger! Risk of accident when commissioning the vehicle due to a lack of braking effect when the service brake is operated for the first time after repair work Push down brake pedal several times Model 221.095 /195: Fully depress brake pedal several times until a firm resistance is noticeable. AP42.10-P-4210SX	16		Replace rear axle brake caliper. Install new front axle brake caliper.	AR42.10-P-0070SX
Clean contact surfaces of brake pads (5) on brake caliper (4) and brake caliper support (7) using rags Clean contact surfaces of brake pads (5) on brake caliper (4) and brake caliper support (7) using rags Cleaner from package All models except model 216.374 /377 /379, 221.074 /077 /174 /177 /179 Only use the brake pastes listed in the linked description, and apply it solely at the specified positions, therwise there may be problems with noise or damage to the brake system! MB brake paste Molykote (copper colored) MB Plastilube brake paste (prownish) Model 216.374 /377 /379, 221.074 /077 /174 /177 /179: Use ATE Plastilube paste only on the front and rear axles. ATE brake pad paste (ATE Plastilube) Panger! Risk of accident when commissioning the vehicle due to a lack of braking effect when the service brake is operated for the first time after repair work Push down brake pedal several times Model 221.095 /195: Fully depress brake pedal several times until a firm resistance is noticeable. AP42.10-P-4210SX		Clean		
brake caliper (4) and brake caliper support (7) using rags Description of the process of the				
221.074 /077 /174 /177 /179 □ Only use the brake pastes listed in the linked description, and apply it solely at the specified positions, otherwise there may be problems with noise or damage to the brake system! MB brake paste Molykote (copper colored) MB Plastilube brake paste (brownish) Model 216.374 /377 /379, 221.074 /077 /174 /177 /179: Use ATE Plastilube paste only on the front and rear axles. ATE brake pad paste (ATE Plastilube) *BR00.45-Z-1057-06A *BR00.45-Z-1084-06A *BR	17	brake caliper (4) and brake caliper support (7)	process. Do not use sharp-edged or pointed tools, otherwise the brake caliper (4) or brake caliper support (7) will be damaged.	*BR00.45-Z-1028-04A
specified positions, otherwise there may be problems with noise or damage to the brake system! MB brake paste Molykote (copper colored) MB Plastilube brake paste (brownish) Model 216.374 /377 /379, 221.074 /077 /174 /177 /179: Use ATE Plastilube paste only on the front and rear axles. ATE brake pad paste (ATE Plastilube) *BR00.45-Z-1084-06A	18	Coat brake paste	221.074 /077 /174 /177 /179 Only use the brake pastes listed in the	AR42.10-P-0161-01B
19 Install in the reverse order Risk of accident when commissioning the vehicle due to a lack of braking effect when the service brake is operated for the first time after repair work Push down brake pedal several times Model 221.095 /195: Fully depress brake pedal 10-times in quick succession. Model 216, 221, except 221.095 / 195: Depress brake pedal several times until a firm resistance is noticeable. Check fluid level in the brake fluid reservoir, Risk of accident when commissioning the vehicle due to a lack of braking effect when the service brake pedal several times until the pressure is built up and maintained in the brake system. AS42.50-Z-0002-01A Model 221.095 /195: Fully depress brake pedal 10-times in quick succession. Model 216, 221, except 221.095 / 195: Depress brake pedal several times until a firm resistance is noticeable.			specified positions, otherwise there may be problems with noise or damage to the brake system! MB brake paste Molykote (copper colored) MB Plastilube brake paste (brownish) Model 216.374 /377 /379, 221.074 /077 /174 /177 /179: Use ATE Plastilube paste only on the front and rear axles.	*BR00.45-Z-1084-06A
Push down brake pedal several times Push down brake pedal several times Check fluid level in the brake fluid reservoir, Pask of accident when commissioning the vehicle due to a lack of braking effect when the service brake is operated for the first time after repair work Push down brake pedal several times Model 221.095 /195: Fully depress brake pedal 10-times in quick succession. Model 216, 221, except 221.095 / 195: Depress brake pedal several times until a firm resistance is noticeable. AS42.50-Z-0002-01A AS42.50-Z-0002-01A AS42.50-Z-0002-01A AP42.10-P-4210SX	19	Install in the reverse order		
Model 216, 221, except 221.095 / 195: Depress brake pedal several times until a firm resistance is noticeable. Check fluid level in the brake fluid reservoir, AP42.10-P-4210SX	© Danger!	Risk of accident when commissioning the vehicle due to a lack of braking effect when the service brake is operated for the first time after repair work	several times until the pressure is built up and maintained in the brake system. Model 221.095 /195: Fully depress brake	
			Model 216, 221, except 221.095 / 195: Depress brake pedal several times until a firm	
	21			AP42.10-P-4210SX

		AS42.00-Z-0001-01A
22	Carry out brake test on the test stand	AP42.00-P-4290BA

■ Front axle brake caliper


Number	Designation	Model 216 except model 216.374/377/379	Model 216.374/377/379
BA42.10-P-1004-10M	Guide pin, brake caliper to brake caliper support Nm	28	28

■ Front axle brake caliper

Number	Designation	Model 221 except model 221.074/077/174/ 177/179	Model 221.074/077/174 /177/179
BA42.10-P-1004-10M	Guide pin, brake caliper to brake caliper support Nm	28	28

■ Rear axle brake caliper

Number	Designation	Model 216 except 216.374/ 377/379	Model 216.374/ 377/379	Model 221 except model 221.074/ 077/174/ 177/179	Model 221.074/ 077/174/ 177/179
BA42.10-P-1003-12M	Guide pin on caliper support Nn	28	28	28	28

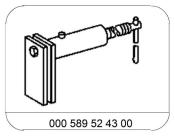

Pusher tool

Repair materials

Number	Designation	Order number

BR00.45-Z-1028-04A	Cleaner from package	Adolf Würth GmbH & Co. KG Reinhold-Würth-Str. 12-17 74653 Künzelsau-Gaisbach Germany Tel. +49 7940 15-0 Fax +49 7940 15-1000 www.wuerth.de
BR00.45-Z-1054-06A	ATE brake pad paste (ATE Plastilube) Article number: 03.9902-1001.2 (35 ml) Article number: 03.9902-1002.2 (75 ml)	Continental Teves AG & Co. oHG Guerickestr. 7 60488 Frankfurt Germany Tel. +49 69 7603-1 Fax +49 69 761061 www.conti-online.com
BR00.45-Z-1057-06A	MB brake paste Molykote (copper colored)	A 001 989 87 51
BR00.45-Z-1078-06A	ATE brake cylinder paste 188 ml. Article no.: 03.9902-0501.2	Continental Teves AG & Co. oHG Guerickestr. 7 60488 Frankfurt Germany Tel. +49 69 7603-1 Fax +49 69 761061 www.conti-online.com
BR00.45-Z-1084-06A	MB Plastilube brake paste (brownish)	A 002 989 37 51