


**ENGINE 642 in MODEL 221**

B28/8 Pressure differential sensor (DPF)

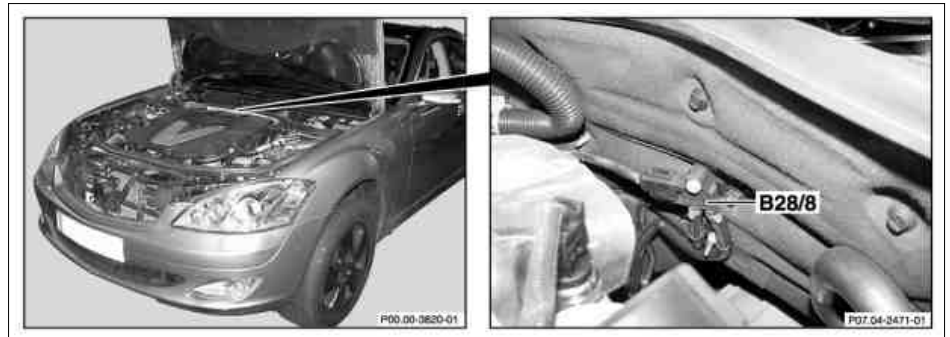

P07.04-2470-04

|                  |   |   |                     |
|------------------|---|---|---------------------|
| ⚠                | <b>Remove/install</b>   |   |                     |
| <b>⚠ Danger!</b> | <b>Risk of injury</b> to skin and eyes caused by handling hot or glowing objects. | Wear safety gloves, protective clothing and safety glasses, if necessary. | AS00.00-Z-0002-01A  |
| 1                | Remove engine trim panel  |   | AR01.10-P-2405SXI   |
| 2                | Remove heat shield on the firewall  |   |                     |
| 3                | Detach coupling on pressure differential sensor (DPF) (B28/8)                     |   |                     |
| 4                | Release hose clamps   | <b>i</b> <b>Installation:</b> Replace hose clamps.                        |                     |
| 5                | Detach molded hoses on pressure differential sensor (DPF) (B28/8)                 |   |                     |
| 6                | Remove pressure differential sensor (DPF) (B28/8)                                 | <b>Nm</b>   | *BA07.04-P-1009-01G |
| 7                | Install in the reverse order  |   |                     |

**Nm Sensors**

| Number             | Designation  |    | Engine 642 without particle filter | Engine 642 with particle filter |
|--------------------|--|----|------------------------------------|---------------------------------|
| BA07.04-P-1009-01G | Nut connecting pressure differential sensor to bracket | Nm | -                                  | 10                              |