



P54.65-3098-07

1 Trunk floor paneling

2 Hinge lever passage frame
3 Side trunk paneling

E18/4 Right luggage compartment lamp
N62 PTS control unit

	<p>Remove/install</p>		
	<p>Notes on avoiding damage to electronic components due to electrostatic discharge</p>		<p>AH54.00-P-0001-01A</p>
<p>1.1</p>	<p>Buffer basic data of the PTS control unit (N62) in STAR DIAGNOSIS</p> <p>Connect STAR DIAGNOSIS and read out fault memory</p>	<p>When installing new Parktronic control unit (N62).</p> <p>i Installation: Transfer the temporarily stored basic data to the new Parktronic control unit (N62).</p>	<p>AD00.00-P-2000-04A</p>
<p>2</p>	<p>Switch off ignition and withdraw transmitter key or Keyless Go start/stop button from the EIS [EZS] control unit</p>	<p>i Keyless Go start/stop button only for vehicles with code (889) Keyless Go.</p>	
<p>3</p>	<p>Loosen panel in side of luggage compartment (3) and swivel to one side until the PTS control unit (N62) is accessible</p>	<p> Do not bend the hinge arm passage frame (2) otherwise the plastic will become discolored.</p> <p>Vehicles without code (Z07) Top protection Vehicles with code (Z07) Top protection</p>	<p>AR68.30-P-4600SX AR68.30-P-4600SXS</p>
<p>4</p>	<p>Separate electrical connectors on the PTS control unit (N62)</p>		
<p>5</p>	<p>Remove PTS control unit (N62)</p>		
<p>6</p>	<p>Install in the reverse order</p>		