
AR32.22-P-2015SX Remove/install air suspension valve unit MODEL 216, 221.0 /1

Shown on model 221

1 2 3	Nut Rubber guide Electrical connector			
Pressure line connections:				
4SP	To central reservoir (black)			
5VL	To left front suspension strut (green)			
6P	To AIRmatic compressor unit (brown)			
7HR	To right rear suspension strut (red)			
8HL	To left rear suspension strut (blue)			
9VR	To right front suspension strut (yellow)			
A9/1 B7 Y36/6	AIRMATIC compressor unit AIRMATIC pressure sensor Level control valve unit			

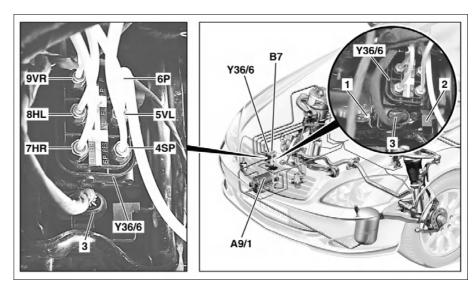

P32.22-2400-05

XX	Remove/install		
1 AD	Drain AIRmatic Connect STAR DIAGNOSIS and read out fault memory		AD00.00-P-2000-04A
2	Remove front section of fender liner in right front fender	Model 221.095/195	
3	Remove compressor unit (A9/1)		AR32.22-P-2001SX
4	Remove compressor unit holder (A9/1)	Model 221.095/195	AR32.22-P-2009SX
5	Disconnect electrical connector (3) from valve unit (Y36/6)		
6	Detach pressure lines from valve unit (Y36/6)	I Observe pressure line assignment and color coding in order to guaranteed faultless function of the AIRmatic. Im Im Im	*BA32.22-P-1006-03D *211589000900
7	Seal pressure line connections (4SP, 5VL, 6P, 7HR, 8HL, 9VR) with stop plugs	3	*129589009100
8	Unscrew nut (1) and remove valve unit (Y36/6)	Except model 221.095/195	*BA32.22-P-1005-03D
4	Checking		
9	Check rubber guide (2)	i Check for damage and correct seating.	
10	Install in the reverse order		
11	Read out fault memory and erase if necessary		
12	Check AIRmatic for leaks.		AR32.22-P-8100SX
Danger!	Risk of accident caused by vehicle starting off by itself when engine is running. Risk of injury caused by contusions and burns during starting procedure or when working near the engine as it is running Perform engine test run and check AIRmatic	Secure vehicle to prevent it from moving by itself. Wear closed and snug-fitting work clothes. Do not touch hot or rotating parts.	AS00.00-Z-0005-01A
	for proper operation		

Nm Air suspension

Number	Designation	Model 216	Model 221
BA32.22-P-1005-03D	Nut of valve unit to bracket Nn	5	5
BA32.22-P-1006-03D	Pressure line of air suspension to valve unit Nn	3	3

14.12.10

