
ENGINE 275.950 in MODEL 215.376, 220.176

ENGINE 275.951 in MODEL 230.476

ENGINE 275.953 in MODEL 216.376, 221.176

ENGINE 275.954 in MODEL 230.477

ENGINE 285 in MODEL 240

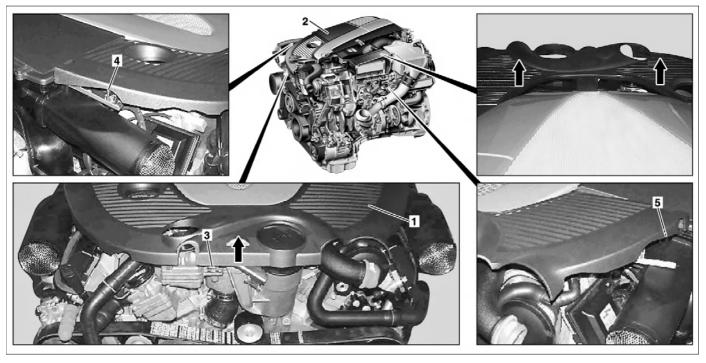

P01.10-2383-09

Shown on engine 275

- Front engine cover
- Front engine cover

Rear engine cover


Mounting clip Bracket

8


- Mounting clip 3
- Mounting clip
- 5 Mounting clip
- Mounting clip Mounting clip


- Rear engine cover
- Mounting clip

- Mounting clip 4
- 5 Mounting clip

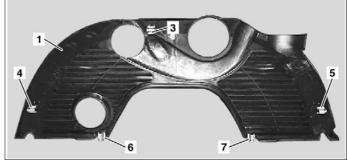

P01.10-2384-10

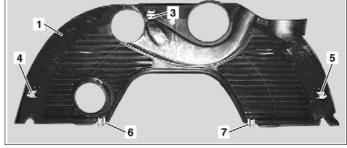

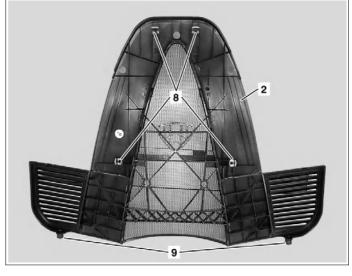

P01.10-2399-11

XX	Remove/install	
1	Lift the front engine cover (1) in the area of the mounting clamp (3) (arrow) and unclip the mounting clamp (3)	Only lift the front engine cover (1) as far as necessary otherwise the engine cover can be damaged.
2	Lift the front engine cover (1) in the area of the mounting clamps (4, 5) and unclip the mounting clamps (4, 5)	Only lift the front engine cover (1) as far as necessary otherwise the engine cover can be damaged.
3	Unclip mounting clamps (6, 7)	Grip beween the front engine cover (1) and the rear engine cover (2) with one hand and lift the front engine cover (1).
4	Remove front engine cover (1)	
5	Lift the rear engine cover (2) and unclip the mounting clamps (8)	Only lift the rear engine cover (2) as far as necessary otherwise the engine cover can be damaged.
6	Pull out the brackets (9) from the supports on the charge air coolers and remove the rear engine cover (2)	
7	Install in the reverse order	