


MODEL 216.3 up to 1.6.08 except CODE (809) Model year 2009

MODEL 221.0 /1 up to 1.6.08 except CODE (809) Model year 2009

## Shown on model 221

- 1 Ground cable  
 2 Cover  
 3 Electrical line  
 4 Electrical line  
 5 Electrical line

F32 Front prefuse  
 G1/4 Starter battery

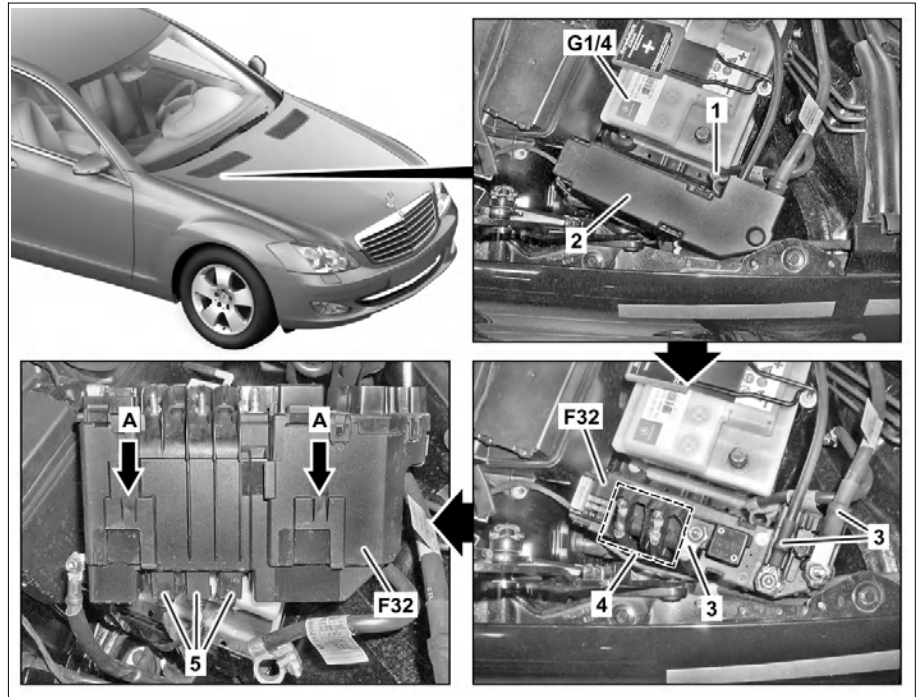

P54.15-3161-06

☒ ☒	Remove/install		
1	Disconnect ground line (1) of starter battery (G1/4) and the on-board electrical system battery	<b>i</b> Disconnect ground line (1) on on-board electrical system with two batteries.	AR54.10-P-0003SX
2	Unclip cover (2) on the front prefuse box (F32)		
3	Detach electrical lines (3) at the top of the prefuse box at the front (F32)	<b>i</b> <b>Installation:</b> The electrical lines (3) are coded.	
4	Detach electrical lines (4) at the top of the prefuse box at the front (F32)	<b>i</b> The number of the electrical lines (4) differs depending on the vehicle equipment. <b>i</b> <b>Installation:</b> The electrical lines (4) are coded.	
5	Unclip prefuse box at front (F32) (arrows A), pull out upwards and place to one side	<b>i</b> <b>Installation:</b> Pay attention to correct seat of prefuse box at front (F32).	
6	Disconnect electrical connectors (5) at bottom of prefuse box at front (F32)		
7	Remove prefuse box at front (F32)		
8	Install in the reverse order		