

- 1 Head restraint
- 2 Guide
- 3 Circlip
- 4 Electrical connector



P91.16-2402-06

Modification notes

15.5.09	Disconnect ground line of battery - added	Step 3	
---------	---	--------	--

☒ ☒	Remove/install		
⚠	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Remove seat-back lining from backrest of left or right front seat		
2	Move front seat forwards and upwards and head restraint downwards and tilt seat backrest backwards		
3	Disconnect battery ground line		AR54.10-P-0003SX
4	Remove circlip (3)		
5	Pull head restraint (1) out of guides (2)		
6	Disconnect electrical connector (4)		
7	Pull head restraint (1) out upward		
8	Install in the reverse order		