



 


Model 221.0/1

Shown on right front seat

- 1 Sidebag unit
- 2 Backrest cover
- 3 Rivets
- 4 Electrical connector

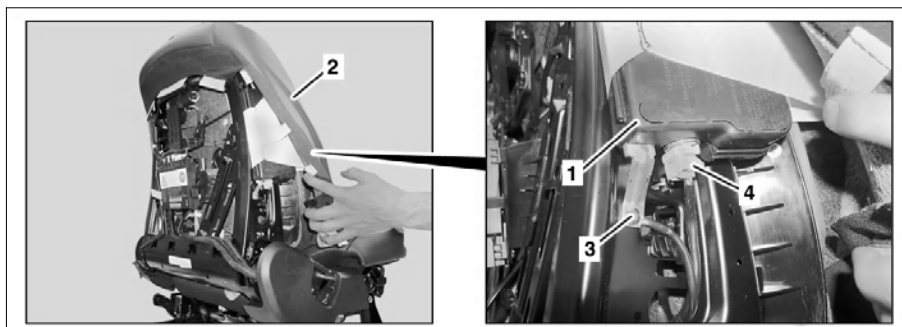

P91.60-3104-04

 Warning	Risk of injury during testing and repair operations related to pyrotechnical components	Do not expose pyrotechnical component parts to temperatures above 100 °C or 212 °F. Disconnect current supply when working on such component parts.	AS91.00-Z-0008-01A
	Notes on self-locking nuts and bolts		AH00.00-N-0001-01A
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Information, assessment and legal requirements when working with, handling and storing pyrotechnical components		AH91.00-Z-0000-10A
	Remove/install		
1	Adjust left and right front seat toward front		
2	Switch off ignition and store transmitter key outside of transmission range (min. 2 m)		
3	Connect ground line to starter battery and to on-board electrical system battery		AR54.10-P-0003SX
4	Remove seat-back lining from backrest of left or right front seat		AR91.18-P-1820SX
5	Release backrest cover (2) in area of sidebag unit (1)		AR91.18-P-1820SX
6	Drill out rivets (3)		
7	Release and disconnect electrical connection (4) and remove sidebag unit (1)		
8	Install in the reverse order		
	Check		
9	Check and erase vehicle fault memory using diagnostic system	When replacing sidebag unit (1).	AD00.00-P-2000-04A
 AD			