


MODEL 219.3

Removal illustrated

- 1 Stowage box cover
- 2 Upper button
- 3 Lock-up button
- 4 Upper set-up retainer
- 5 Lower set-up retainer
- 6 Lower button
- 7 Pins



P68.20-3307-06

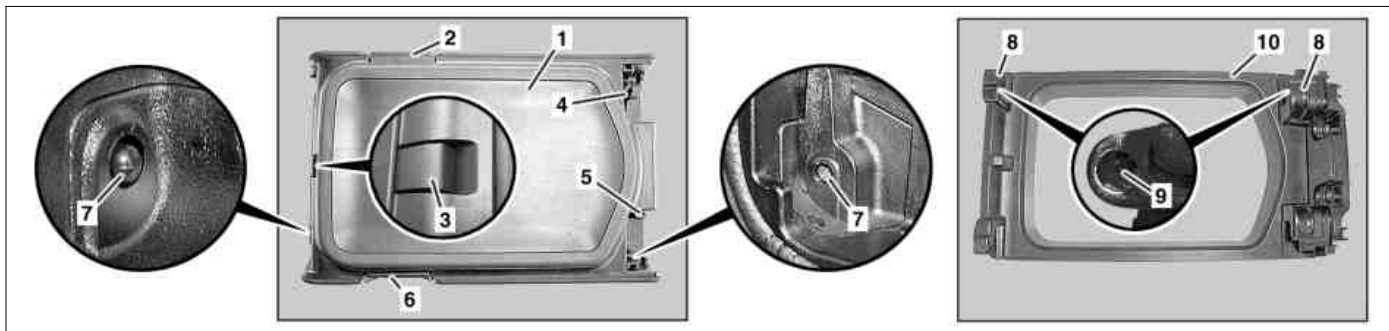

P68.20-3308-07

Installation illustrated

- 1 Stowage box cover
- 2 Upper button
- 3 Lock-up button
- 4 Upper set-up retainer
- 5 Lower set-up retainer
- 6 Lower button
- 7 Pins
- 8 Pivot bearing
- 9 Bore
- 10 Retaining frame

☒	Remove		
<p><b>i</b></p>	<p>The following work description assumes that the stowage box cover (1) is opened from the left side and is removed and installed from the left side of the vehicle. The locations in the work descriptions refer to the stowage box cover (1) opened from the left.</p> <p>The stowage box cover (1) can also be removed from the right side</p>		
1	Open stowage box cover (1) by pressing upper button (2)		
2	Simultaneously press lock-up button (3) and upper set-up retainer (4) and then release	<p><b>i</b> This causes the upper button (2) to move the "locked" position Do not actuate lower set-up retainer (5)</p>	
3	Press lower set-up retainer (5) and hold down	<p><b>i</b> Do not actuate upper set-up retainer (4)</p>	
4	Simultaneously actuate lock-up button (3) and lower button (6) when lower set-up retainer (5) is pressed.	<p><b>i</b> This causes both lower pins (7) to move into the stowage box cover (1). Lower button (6) arrests in "unlocked" position</p>	
5	Remove stowage box cover (1) from center		

☒	Install		
6	Prepare stowage box cover (1) for installation	<p><b>i</b> The lower button (6) must be in the "unlocked" position. Simultaneously the lower set-up retainer (5) is arrested</p>	AR68.20-P-5701-01TX
7	Position stowage box cover (1) on front and rear pivot bearing (8) so that the retracted front and rear pins (7) can move into the holes (9) of retaining frames (10).When both pins (7) have reached the correct position, simultaneously actuate lock-up button (3) and lower set-up retainer (5). This causes both pins (7) to move into the corresponding hole (9) simultaneously.	<p><b>i</b> Slightly tilt stowage box cover (1) in closing direction</p>	
8	Simultaneously press lock-up button (3) and upper set-up retainer (4) and then release Completely press in upper button (2) and hold down Then release upper set-up retainer (4) and lock-up button (3) one after the other	<p><b>i</b> This causes the upper button (2) to remain in the "locked" position</p>	
9	Release upper button (2) and close stowage box cover (1)		
10	Check stowage box cover (1) for proper function		