


**MODEL 221.0** except CODE (223) Rear bench seat with electrically adjustable outer seats with PRE-SAFE positioning function for outer seats and outer head restraints

**MODEL 221.1** except CODE (223) Rear bench seat with electrically adjustable outer seats with PRE-SAFE positioning function for outer seats and outer head restraints  
except CODE (224) Rear individual seat design

- 1 Rear seat backrest
- 2 Bolt
- 3 Nut
- 4 Retaining clip

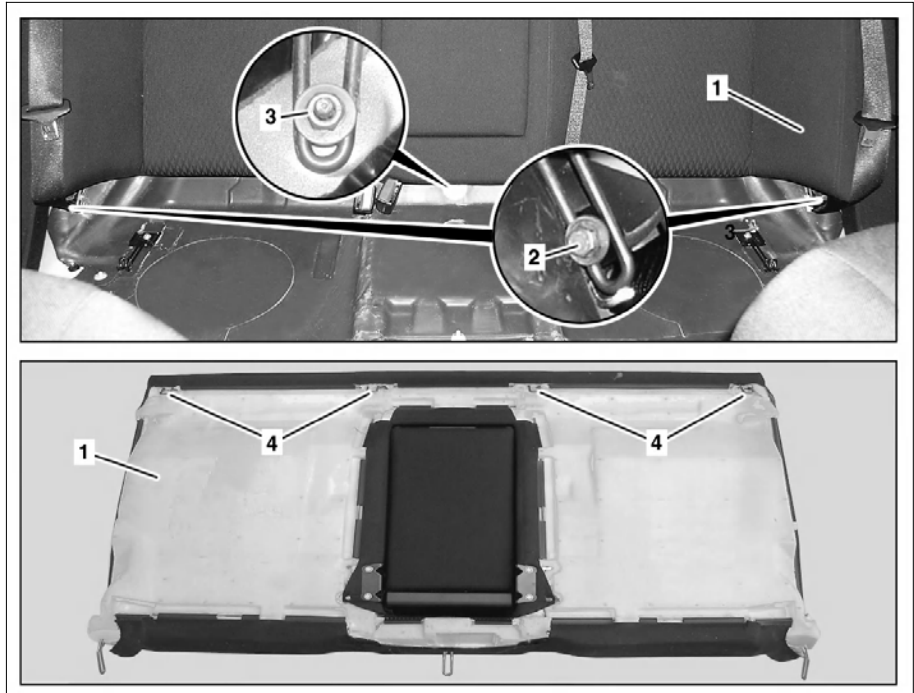

P91.12-2930-06

☒ ☒	Remove/install		
1	Fold down all rear head restraints		
2	Remove rear seat cushion		AR91.12-P-1020SY
3	Remove bolts (2)		
4	Unscrew nut (3)		
5	Move rear seat backrest (1) upwards out of the rear shelf and remove from the vehicle	<p>⚠ Remove rear seat backrest (1) from the vehicle carefully, to avoid damage to components in the vehicle interior or on the rear doors.</p> <p><b>i</b> <b>Installation:</b> Assistance required to lift either of the outer seat belts or the middle seat belt.</p> <p>Ensure that the retaining brackets (4) have engaged in the corresponding mounts on the rear shelf.</p>	
6	Install in the reverse order		