
MODEL 221.0/1


## Shown on vehicle with code (220) Parktronic system (PTS) and code (600) Headlamp cleaning system

- Front bumper 1
- 2 Flap (with code (600) Headlamp cleaning system)
- 3 Tow eye cover
- 4 License plate molding

E5/1 Left front fog lamp E5/2 Right front fog lamp

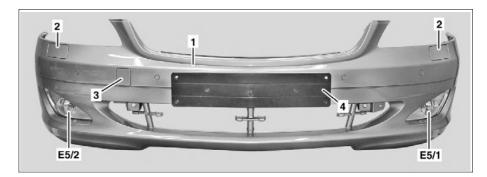

P88.20-2774-04

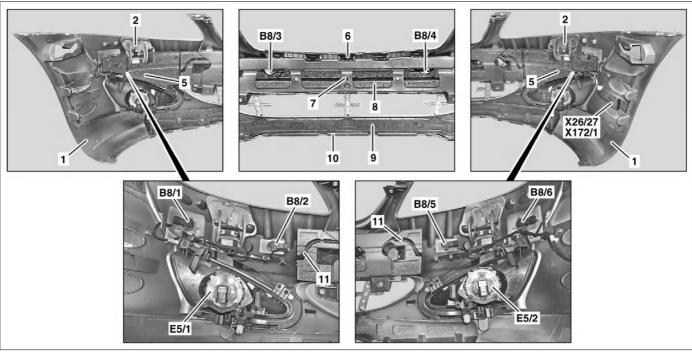

P88.20-2775-09

## Shown on vehicle with code (220) Parktronic system (PTS) and code (600) Headlamp cleaning system

- Front bumper
- 2 Flap (with code (600) Headlamp cleaning system)
- Outer impact absorber
- 6 Support
- Inner part, middle
- 8 Center impact absorber
- Bottom impact absorber
- 10 Basic carrier
- Wiring harness (with code (220) Parktronic system (PTS) or code (229) Park Assist)
- B8/1 Outer left front PTS ultrasonic sensor (with code (220) Parktronic system (PTS)) Center left front PTS ultrasonic B8/2 sensor (with code (220)
- Parktronic system (PTS) B8/3 Left front inner PTS ultrasonic sensor (with code (220) Parktronic system (PTS)
- Inner right front PTS ultrasonic B8/4 sensor (with code (220) Parktronic system (PTS)
- B8/5 Center right front PTS ultrasonic sensor (with code (220) Parktronic system (PTS)
- B8/6 Outer right front PTS ultrasonic sensor (with code (220) Parktronic system (PTS) E5/1 Left front fog lamp E5/2 Right front fog lamp
- X26/27 PTS, front bumper connector (with code (220) Parktronic system (PTS)
- X172/1 Radar sensors/FFS connector, front bumper (with code (229)


Park Assist)

## Vehicles with code (229) Park Assist

1 Front bumper

Bracket (with code (229) Park Assist)Expansion rivet (with code (229) Park Assist)

A86/1b1 Left outer radar sensor, front bumper (with code (229) Park Assist)
A86/1b2 Left inner radar sensor, front bumper (with code (229) Park Assist)
A86/1b3 Right inner radar sensor, front bumper (with code (229) Park Assist)
Right outer radar sensor, front bumper (with code (229) Park Assist)

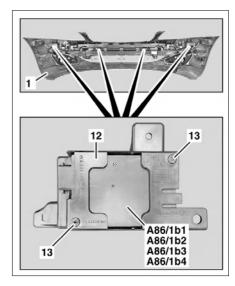

P88.20-2776-02

, , t	Disassemble/assemble		
1	Remove front bumper (1).		AR88.20-P-2000SX
2	Remove license plate.		
3	Remove license plate molding (4)		
4	Install tow eye cover (3)		
5	Remove left and right outer impact absorber (5)		
6	Remove left front fog lamp (E5/1) and right front fog lamp (E5/2)		
7	Remove support (6), center inner section (7) and basic carrier (10)		
8.1	Expose wiring harness (11) and remove front bumper PTS connector (X26/27) or radar sensors/FFS connector, front bumper (X172/1)	On vehicles with code (220) Parktronic system (PTS) or code (229) Park Assist	
9	Remove center impact absorber (8) and bottom impact absorber (9)		
10.1	Remove front PTS ultrasonic sensors (B8/1, B8/2, B8/3, B8/4, B8/5 and B8/6)	On vehicles with code (220) Parktronic system (PTS)  i Installation:Ensure that sealing rings of PTS ultrasonic sensors (B8/1, B8/2, B8/3, B8/4, B8/5 and B8/6) are seated correctly.	
(1)	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
11.1	Remove radar sensors (A86/1b1, A86/1b2, A86/1b3 and A86/1b4) with corresponding bracket (12).	On vehicles with code (229) Park Assist	
(1)	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
12.1	Remove flap (2)	On vehicles with code (600) Headlamp cleaning system	
13	Assemble in reverse order		