



P32.32-2135-79

Shown on model 221.0

A1	Instrument cluster	N47-5	ESP control unit	N80	Steering column module
A9/1	AIRMATIC compressor unit	N49	Steering angle sensor	N93	Central gateway control unit
B22/3	Rear axle level sensor	N51	AIRMATIC with ADS control unit	S6/2	Cockpit switch group
B22/8	Left front level sensor	N69/1	Left door control unit (model 216) or left front door control unit (model 221)	S6/2s10	Level adjustment switch
B22/9	Right front level sensor	N69/2	Right door control unit (model 216) or right front door control unit (model 221)	S6/2s15	Chassis settings switch
N3/9	CDI control unit (model 221 with diesel engine, located on left on engine 629, on right on engine 642)	N69/3	Left rear door control unit (model 221)	Y36/6	Level control valve unit
N3/10	ME-SFI control unit (with gasoline engine)	N69/4	Right rear door control unit (model 221)	Y51	Left front axle damping valve unit
N10/1	Front SAM control unit with fuse and relay module	N72/1	Upper control panel control unit	Y52	Right front axle damping valve unit
N10/2	Rear SAM control unit with fuse and relay module	N73	EIS [EZS] control unit	Y53	Left rear axle damping valve unit
				Y54	Right rear axle damping valve unit