AR32.20-P-0300SX Remove/install stabilizer bar on front axle 16.3.11

MODEL 221.0 /1 except CODE (487) Active Body Control (ABC) **MODEL** 216.3 except CODE (487) Active Body Control (ABC) with 4MATIC

2 Lines

2a **Brackets**

10 Stabilizer bar

10a Rubber bushing

Spring control arm 17


21b Retaining clip

21e Bolts

23 Link rod

23c Nut

40 Suspension strut

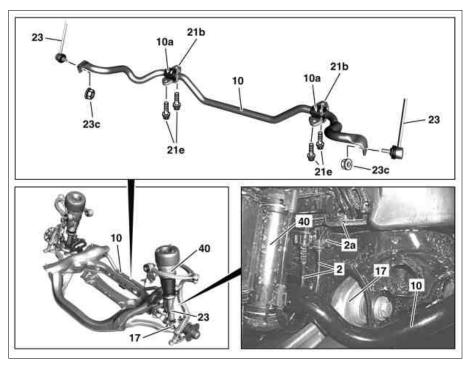

P32.20-2173-06

Modification notes

12.3.08	Value changed: Nut, link rod to stabilizer bar		*BA32.20-P-1001-02O
---------	--	--	---------------------

X	Remove/install		
(1)	Notes on self-locking nuts and bolts		AH00.00-N-0001-01A
(3)	When working on the front-end assembly, be careful not to scratch, mark or notch the surfaces of aluminum parts. Otherwise the service life of the parts will be affected		
i	Notes on AIRmatic		AH32.22-P-1000-02SX
i Installation	Only tighten nuts and bolts of chassis components when vehicle is in a ready-to-drive condition.		
1	Remove front wheels		
₽ÃΡ	Remove/install wheels		AP40.10-P-4050SX
2	Remove bottom engine compartment paneling	Vehicles with top protection, code Z07	AR61.20-P-1105SXS
		Vehicles without top protection	AR61.20-P-1105SX
3	Completely discharge all pressure in the front suspension struts (40) using STAR DIAGNOSIS		
4	Unscrew nuts (23c) of link rods (23) to stabilizer bar (10) and press link rods (23) out of stabilizer bar (10)	Check rubber boots of link rods (23) for signs of damage; fit new link rods (23) if necessary.	*BA32.20-P-1001-02O
5	Remove bolts (21e) and remove retaining bracket (21b)	Nm	*BA32.20-P-1003-02O
6	Unclip lines (2) from brackets (2a)		
7	Detach left or right suspension strut (40) from spring control arm (17)	Vehicles with top protection, code Z07	AR32.25-P-1017SXS
		Vehicles without 4-MATIC and without maximum protection	AR32.25-P-1017SX
		Vehicles with 4-MATIC	AR32.25-P-1017SYZ
8	Detach left or right spring control arm (17) from front axle carrier	Vehicles with top protection, code Z07	AR33.15-P-0170SXS
9	Remove stabilizer bar (10) toward rear	Check rubber mount (10a) of stabilizer bar (10) for damage and wear, replace	

10	Install in the reverse order	onto the stabilizer bar (10).	
		i The rubber mounts (10a) are molded	

Nm Front axle stabilizer bar

Number	Designation		Model 216	Model 221
BA32.20-P-1001-02O	Nut, link rod to stabilizer bar	m	90	90
BA32.20-P-1003-02O	Bolt, torsion bar to front axle carrier N	m	50	50