


Propeller shaft installed


- 1.1 Using drift, loosen fitting sleeves of flex disks from flange of transmission or rear axle center assembly.

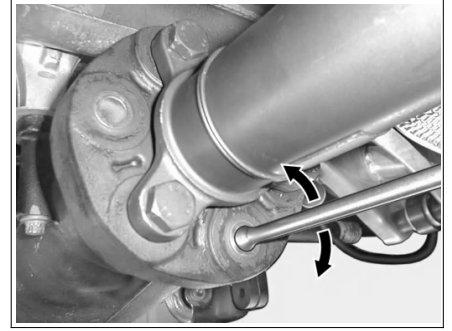

P41.10-2007-01

Propeller shaft removed

- 1.2 Loosen fitting sleeves of flex disks from propeller shaft using drift.

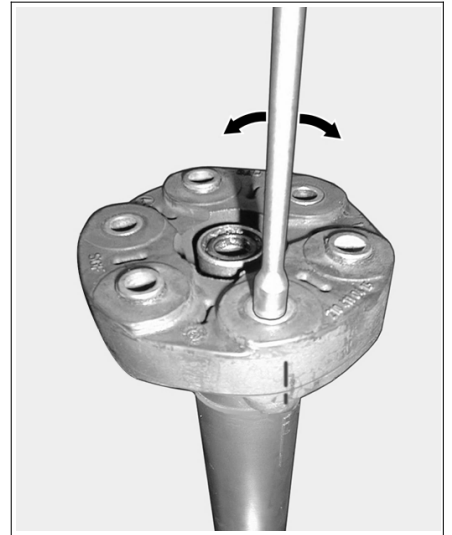

P41.10-2008-02