

Item	Designation	Coordinates
E17/18	Left rear footwell lamp	20L
F1/7	Left instrument panel fuse box	3L
F1/7f92	Fuse 92	1K
K18/4	Left front seat belt comfort solenoid	8L
M18/9	Left front seat cushion ventilation motor group	10L
M18/10	Left front seat backrest ventilation motor group	22L
M18/10x1	Left front seat backrest ventilation motor group connector	22H
M27/1	Left front seat fore/aft adjustment motor	35L
M27/4	Left front head restraint motor	16L
M27/5	Left front backrest angle adjustment motor	13L
M27/8	Left front seat cushion fore/aft motor	37L
M27/9	Left front seat cushion inclination motor	39L
M27/10	Left front seat height adjustment motor	41L
N29/5	Left front seat ventilation blower regulator	25L
N32/1	Left front seat control unit	4A 13A 22A 28A 36A 42A
N32/19	Left front dynamic seat control unit	29L
N32/23	Driver lumbar support regulator control unit	32L
R13/1	Left front seat heated cushion	43L
R13/2	Left front backrest heated cushion	11L
R13/2x1	Left front backrest heated cushion connector	11H
U647	Valid for seat ventilation	21E
U749	Valid for multicontour seat (MCS [MKS])	27E
U750	Valid for dynamic seat (DS [FDS])	27E
U911	Valid for lumbar support	31E
W18	Ground (left front seat crossmember)	2E 8H 19E
W26/1	Ground (seat, left front sidebag)	19L
X28/29	Driver-side FFS [RBA]/seat airbag separation point	19H
X30/32	Left interior CAN/FFS [RBA] voltage distributor connector	6L
Z6/30	Circuit 31 connector sleeve	18E
Z61/8	Wiring harness connector sleeve for seat, terminal 31	37G
Z61/10z1	Driver seat backrest/head restraint motor connector sleeve	15E
Z61/10z2	Driver seat backrest/head restraint motor connector sleeve	12E

Item	Designation	Coordinates
CAN B	Interior CAN	6K