


MODEL 216, 221.0 /1

with CODE (409) Left/right front multicontour seats



 
with CODE (432) Left and right dynamic multicontour seat

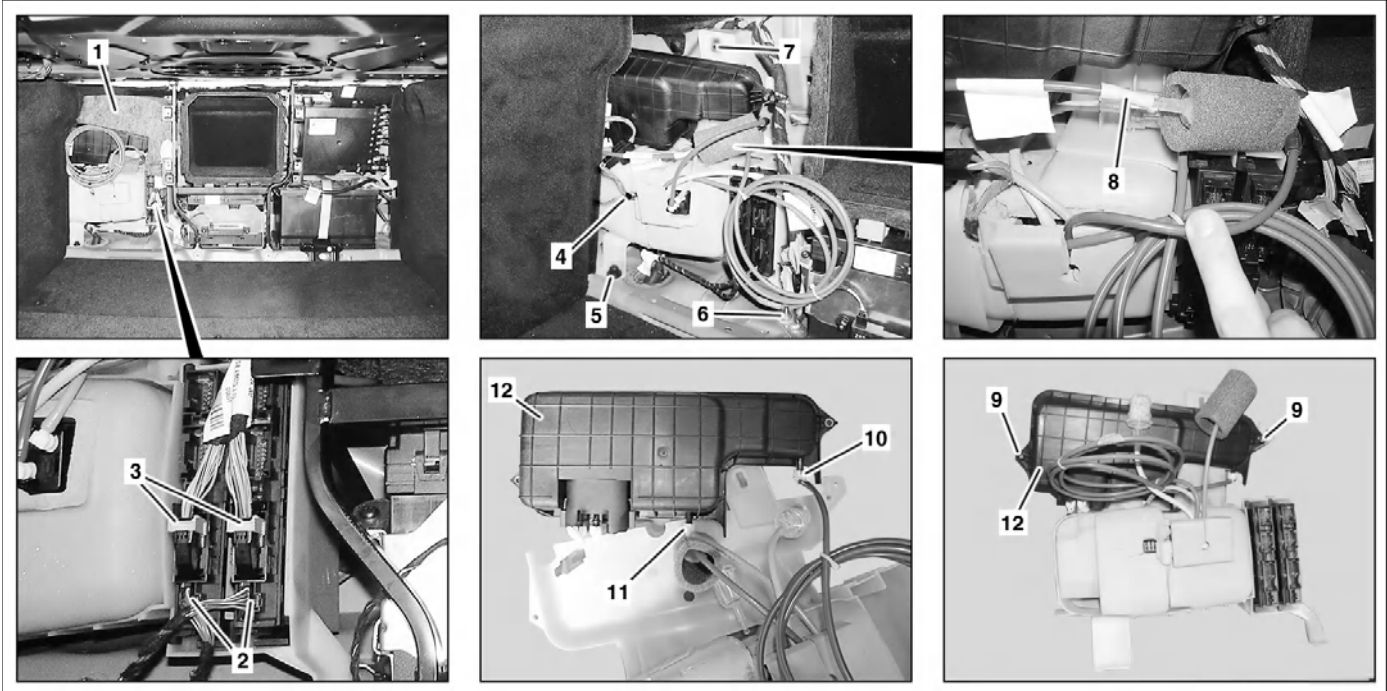

P91.25-2332-09

Shown on vehicle with code (406) Rear multicontour seats

- | | | | | | |
|---|---|---|----------------------|----|------------------------|
| 1 | Insulating material | 4 | Electrical connector | 9 | Screw |
| 2 | Electrical connectors (with code (406) Rear multicontour seats) | 5 | Nut | 10 | Pneumatic connector |
| 3 | Electrical connectors (with code (406) Rear multicontour seats) | 6 | Nut | 11 | Pneumatic connector |
| | | 7 | Nut | 12 | Overpressure reservoir |
| | | 8 | Pneumatic line | | |

 	Remove/install		
1	Remove rear shelf reinforcement	Only on model 221.	AR64.10-P-1200SX
2	Switch off ignition and remove transmitter key or Keyless-Go start/stop button from EZS control unit	 Keyless-Go start/stop button only on vehicles with code (889) Keyless-Go.	
3	Remove insulating material (1) and unscrew nuts (5, 6, 7)		
4	Disconnect electrical connectors (2, 3)	On vehicles with code (406) Rear multicontour seats.	
5	Disconnect electrical connector (4) and pneumatic line (8)		
6	Remove overpressure reservoir (12) with bracket out of vehicle and detach from bracket		
7	Install in the reverse order		