



P91.25-2331-09

- 1 Electrical connector
 2 Trim
 3 Pneumatic lines
 4 Vapor barriers

- M25/1 Lumbar pump
 M40 Multicontour seat pneumatic pump (with code (409) Left/right front multicontour seats)

- M40/1 Pneumatic pump for dynamic seat control (with code (432) Left and right dynamic multicontour seat)

☒ ☒	Remove/install		
1	Switch off ignition and withdraw transmitter key or Keyless Go start/stop button from the EIS [EZS] control unit	i Keyless Go start/stop button only for vehicles with code (889) Keyless Go.	
2	Remove center paneling in trunk	Vehicles without code (Z07) Top protection Vehicles with code (Z07) Top protection	AR68.30-P-4600SX AR68.30-P-4600SXS
3	Remove lumbar pump (M25/1) or multicontour seat pneumatic pump (M40) or pneumatic pump for dynamic seat control (M40/1) with soundproofing (4)		
4	Install in the reverse order		