

P91.60-3102-09


Shown on model 221

- 1 Driver airbag unit
- 2 Steering wheel
- 3 Electrical connector

- 4 Lock tabs
- 5 Electrical connectors


- R12/13 Driver airbag ignition squib 1
- R12/14 Driver airbag squib 2

☒ ☒	Remove/install		
⚠ Danger!	Risk of injury when performing testing or repair work on airbag or emergency tensioning retractor units.	Store airbag units with deployment side facing up; do not expose to temperatures greater than 100 °C. When working on these units, disconnect the power supply.	AS91.00-Z-0001-01A
ⓘ	Notes on performing repair, body work and welding on vehicles with airbags and ETR units		AH91.00-P-0002-01M
ⓘ	Assessment of airbag and seat belt tensioner units in accident vehicles		AH91.00-P-0006-01B
ⓘ	Legal regulations on handling and storing airbags and emergency tensioning retractors		AH91.00-P-0004-01A
1	Adjust the driver seat and the steering column backwards into its end position		
2	Connect ground line to starter battery and to on-board electrical system battery		AR54.10-P-0003SX
3	Insert screwdriver bit into the openings (arrows) at the back of the steering wheel (2) and unscrew the screws out of the driver airbag unit (1)	ⓘ The bolts remain on the steering wheel (2). Nm ⚙	*BA91.60-P-1001-01L *126589001000
4	Remove driver airbag unit (1) far enough from steering wheel (2) until the electrical connector (3) is accessible		
5	Disconnect electrical connector (3)		
6	Release lock tabs (4) and detach electrical connectors (5)	⚙ ⓘ Installation: The electrical connectors (5) must audibly engage when connecting onto driver airbag ignition squib 1 (R12/13) and driver airbag ignition squib 2 (R12/14).	*203589043300
7 OS	Disconnect driver airbag unit (1) from steering wheel (2)	ⓘ If driver airbag unit (1) is replaced, the defective driver airbag unit (1) must be properly disposed of. Refer to: ↓ Notes on disposing of airbag and emergency tensioning retractor units	OS91.00-P-0001-01A
8	Install in the reverse order		


<p>9.1</p> 	<p>Check supplemental restraint system (SRS) with STAR DIAGNOSIS Connect STAR DIAGNOSIS and read out fault memory</p>	<p>i After replacing the driver airbag unit (1). STAR DIAGNOSIS diagnosis system</p>	<p>AD00.00-P-2000-04A *WH58.30-Z-1048-13A</p>
---	---	---	---

Nm Airbag

Number	Designation	Model 216	Model 221
BA91.60-P-1001-01L	Bolt, airbag to steering wheel	Nm 7	7

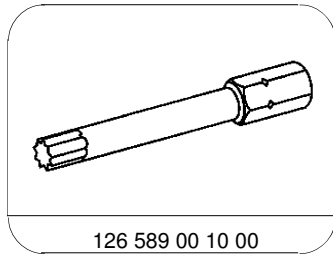

Screwdriver bit

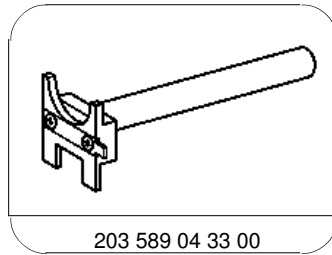

Removal lever

Commercially available tools

Number	Designation	
WH58.30-Z-1048-13A	STAR DIAGNOSIS diagnosis system, Compact Passenger Car	6511 1801 00