 



ⓘ When the steering wheel is detached the fanfare horns and airbag clock spring contact (A45) must not be twisted otherwise this can be damaged.

- 1 Unscrew bolt (1).  
 Bolt (1) is secured to prevent it from falling out.
- 2 Disconnect steering column switch module (2) complete with fanfare horns and airbag clock spring contact (A45) from jacket tube.

- 1 Bolt
- 2 Steering column switch module

A45 Fanfare horns and airbag clock spring contact

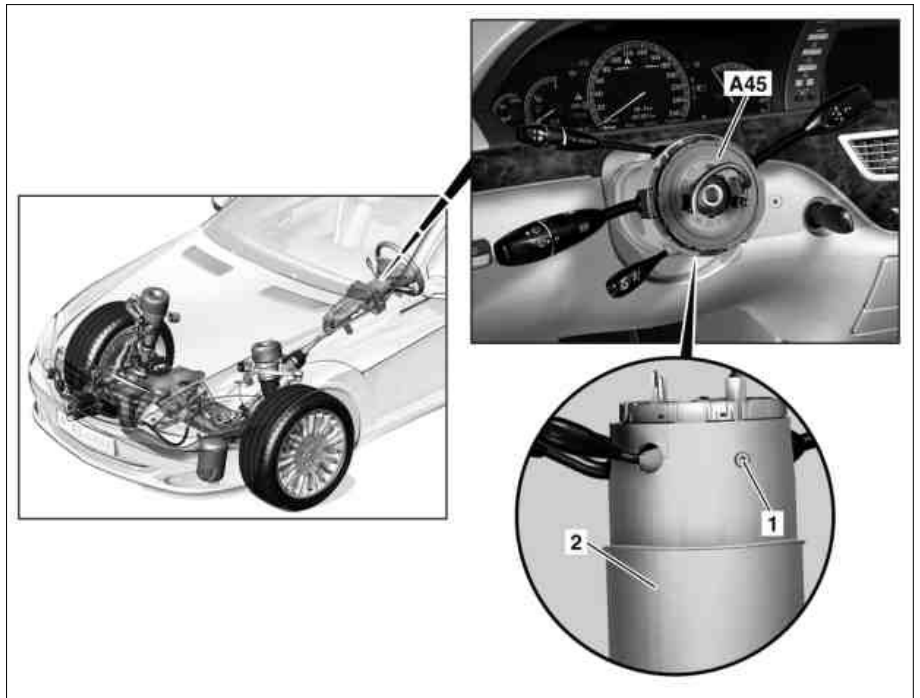

P54.25-4809-06