

Item	Designation	Coordinates
E3	Left taillamp	6L 11L
E3e1	Left turn signal lamp	9L
E3e3	Left backup lamp	8L
E3e5	Left rear fog lamp	10L
E3e6	Left rear side marker lamp	11L
E3e9	Left stop lamp, taillamp and parking lamp	9L
E4	Right taillamp	13L
E4e1	Right turn signal lamp	13L
E4e3	Right backup lamp	14L
E4e5	Right rear fog lamp	12L
E4e6	Right rear side-marker lamp	12L
E4e9	Right stop lamp, taillamp and parking lamp	14L
E18/4	Right luggage compartment lamp	15L
E18/5	Left luggage compartment lamp	16L
E19/1	Left license plate lamp	21L
E19/2	Right license plate lamp	22L
E21	Center high-mounted stop lamp	24L
E21x1	Center high-mounted stop lamp connector	23J
E40/2	Left trunk lid ambient and warning lamp	18L
E40/3	Right trunk lid ambient and warning lamp	20L
F32/4	Interior prefuse box	3L
N10/2	Rear SAM control unit with fuse and relay module	4A 12A 20A
N10/2kM	Circuit 15 (2)/spare 1 relay (changeover contact)	2A
N82/1	Vehicle power supply control unit	3L
U899	Valid for backup camera	7F
W7/1	Ground (right taillamp in trunk)	6G 16G
W17/1	Ground (left rear seat)	24E
W54	Ground (right rear wheelhouse)	20E
Z4/6z5	Luggage compartment lamp circuit 30 connector sleeve	18G
Z6/92	Trunk lid ground connector sleeve	20G
Z38	Backup lamp connector sleeve	8G