

Illustrated on model 221

- 1 Passenger-side wiper blade
- Water collector 2
- 3 Passenger-side wiper arm
- 4 Driver-side wiper blade 5
 - Driver-side wiper arm
 - Covers
- 6 7 Cover


- 8 Nut
- Nut 9
- Clearance Α

XX	Remove/install		
⚠ Danger!	Risk of injury caused by moving parts that can pinch, crush or, in extreme cases even sever extremities.	Always remove ignition key when working on windshield wiper mechanism.	AS82.30-Z-0001-01A
1	Move wiper system to home position		
2	Switch off ignition and detach transmitter key or Keyless Go start/stop button from EIS [EZS] control unit	i Keyless Go start/stop button only for vehicles with code (889) Keyless Go.	
3	Remove cover (7), remove nut (9) and remove driver side wiper arm (5)	 Installation: Position driver side wiper arm (5) such that the distance (A) of approx. 20 mm is maintained. 3 	*201589143300 *210589046300
			*BA82.30-P-1001-01L
4	Remove covers (6), remove nuts (8) and remove passenger side wiper arm (3)	i Installation: Position passenger side wiper arm (3) such that the upper end of the wiper blade on the passenger side wiper blade (1) contacts with the water collector (2) (arrow). S S	*201589143300 *210589046300 *BA82.30-P-1001-01L
5	Install in the reverse order		

Nm Windshield wiper

Number	Designation		Model 216	Model 221.0/1
BA82.30-P-1001-01L	Nut to wiper arm	Nm	33	33

M 201 589 14 33 00 Puller

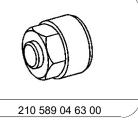

Thrust washer M 10x1.5