



<p>OS32.30-P-0620-01A</p> <p>Danger!</p> <p>Danger!</p>	<p>Disposing on spring actuator</p> <p>Risk of injury to skin or eyes caused by hydraulic fluid spraying out under high pressure. Risk of poisoning caused by swallowing hydraulic fluid</p> <p>Risk of injury caused by drilling gas-filled assemblies or components (noncombustible gases)</p>	<p>Depressurize hydraulic system completely before starting any work on system. Wear protective clothing and safety glasses.</p> <p>Wear safety glasses and a face mask.</p>	<p>AS00.00-Z-0013-01A</p> <p>AS00.00-Z-0006-01A</p>
---	---	--	---

- 1 Allow hydraulic fluid or brake fluid to flow out of the oil gallery (a) into a suitable container for disposal.
- 2 Drill gas chamber (b) of the spring accumulator on the arched side (arrow) with a drill bit (3 mm dia.) until the gas flows out.
- 3 Dispose of spring brake reservoir as scrap metal.

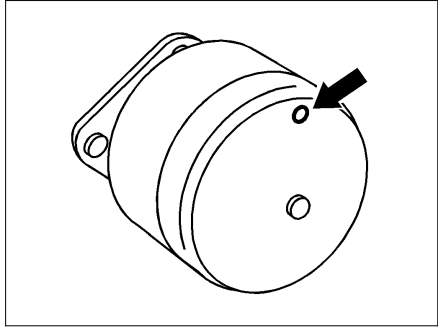

P32.32-0206-01

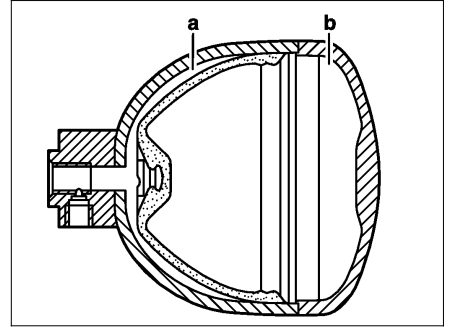

P32.31-0264-01