

MODEL 221.0 /1

with CODE (409) Left/right front multicontour seat

with CODE (432) Left and right dynamic multicontour seat

1 Tensioning element

2 Front seat

N32/15 Left front multicontour backrest control unit

N32/16 Right front multicontour backrest control unit

N32/19 Left front dynamic seat control unit

N32/22 Right front dynamic seat control unit



P91.25-2334-03

	Remove/install		
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Switch ignition off and remove transmitter key or Keyless Go start/stop button from EIS [EZS] control unit	Keyless Go start/stop button only in vehicles with code (889) Keyless Go.	
2	Remove seat-back lining (1) from backrest of left or right front seat (2)		
3	Disconnect electrical connectors and remove left front multicontour backrest control unit (N32/15) or left front dynamic seat control unit (N32/19) and right front multicontour backrest control unit (N32/16) or right front dynamic seat control unit (N32/22)		
4	Install in the reverse order		