



P91.60-4014-79

1	Driver airbag unit	B48	Front passenger seat occupied and child seat recognition sensor	B48/10	Rear door pressure sensor, passenger-side
2	Front passenger airbag unit	B48/1	Driver-side frontal acceleration sensor	B48/11	Left front WSS sensor (weight sensing system) (with code (494) USA version up to 31.8.08)
3	Windowbag unit	B48/2	Passenger-side frontal acceleration sensor	B48/12	Right front WSS sensor (weight sensing system) (with code (494) USA version up to 31.8.08)
4	Rear ETR unit	B48/3	Belt tension sensor (with code (494) USA version)	B48/13	Left rear WSS sensor (weight sensing system) (with code (494) USA version up to 31.8.08)
5	Front sidebag unit	B48/4	Seat occupied recognition pressure sensor (with code (494) USA version as of 1.9.08)	B48/14	Right rear WSS sensor (weight sensing system) (with code (494) USA version up to 31.8.08)
6	ETR unit	B48/5	Airbag system driver assist	K88	Pyrotechnical separator (on model 221.095/195)
7	Rear sidebag unit	B48/6	Airbag system front passenger assist	N2/7	Restraint systems control unit
8	Kneebag unit (with code (294) Kneebag)	B48/7	Driver door pressure sensor		
A1	Instrument cluster	B48/8	Front passenger door pressure sensor		
A6n1	STH or HB control unit (with code (228) Stationary heater)	B48/9	Rear door pressure sensor, driver-side		
B41/1	Front passenger seat occupied recognition (without code (494) USA version and without code (U18) Automatic child seat recognition (ACSR [AKSE]))	B48/10	Rear door pressure sensor, driver-side		
N2/13	WSS control unit (weight sensing system) (with code (494) USA version up to 31.8.08)	N62/1	Radar sensors control unit (SGR) (with code (233) DISTRONIC PLUS as of 1.6.09 up to 31.8.10)	R12/5	Front passenger airbag squib 2
N3/9	CDI control unit (diesel engine, with engine 629 left, with engine 642 located on right)	N62/2	Video and radar sensor system control unit (with code (233) DISTRONIC PLUS as of 1.9.10)	R12/6	Left rear ETR squib
N3/10	ME-SFI [ME] control unit (gasoline engine, with engine 157, 272, 273, 276, 278 positioned at center, with engine 156, 275 positioned at left)	N69/1	Door control module front left	R12/7	Right rear ETR squib
N10/1	Front SAM control unit with fuse and relay module	N69/2	Door control module front right	R12/11	Left rear sidebag squib
N10/2	Rear SAM control unit with fuse and relay module	N69/3	Door control module rear left	R12/12	Right rear sidebag squib
N32/1	Left front seat control unit	N69/4	Door control module rear right	R12/13	Driver airbag ignition squib 1
N32/2	Right front seat control unit	N70	Overhead control panel control unit	R12/14	Driver airbag ignition squib 2
N47-5	ESP control unit (except Model 221.095/195)	N72/1	Upper control panel control unit	R12/20	Left front sidebag squib
		N73	EZS control unit	R12/21	Right front sidebag squib
		N93	Central gateway control unit	R12/22	Left rear windowbag squib
		N110	weight sensing system control unit (WSS) (with code (494) USA version as of 1.9.08)	R12/23	Right rear windowbag squib
		N123/4	Emergency call system control unit (with code (359) TELE AID emergency call system)	R12/25	Driver kneebag squib (with code (294) Kneebag)
				R46	Driver buckle ETR squib
				R46/1	Front passenger buckle ETR squib

R12/4 Front passenger airbag squib 1

S6/2 Cockpit switch group  
S68/1 Driver seat belt buckle and seat  
belt warning switch

S68/2 Front passenger seat belt buckle  
and seat belt warning switch  
Y24/12 Driver NECK-PRO head  
restraint solenoid

Y24/13 Front passenger NECK-PRO  
head restraint solenoid