


AR82.35-P-6000-01SX	Unfasten/fasten windshield washer system washer fluid reservoir		
---------------------	---	--	--

**Shown on model 221 without code (875)
Heated windshield washer system**

- 1 Unscrew nut (2).
- 2 Remove frame seal (3) in area of washer fluid reservoir (1).

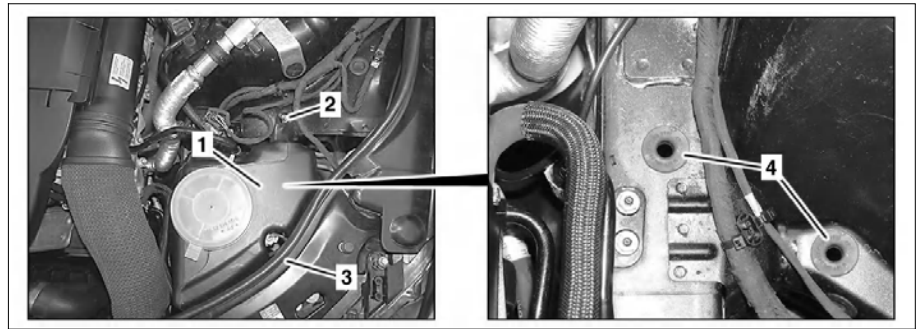

P82.35-2464-04

- 3 Unclip coolant lines from wheel well, remove heat exchanger from washer fluid reservoir (1) and place to one side with coolant lines attached.
i For vehicles with code (875) Heated windshield washer system.
i **Installation:** Ensure that heat exchanger is seated correctly in washer fluid reservoir (1).
- 4 Lift up washer fluid reservoir (1) and tilt to one side with attached electrical lines and hose lines.
i **Installation:** Insert studs on underside of washer fluid reservoir (1) into rubber grommets (4).
- 5 Fasten in reverse order