
AR77.20-P-1000SX Remove/install tilting/sliding roof cover 19.4.06

MODEL 221.0 with CODE (414) Power glass tilting/sliding roof

MODEL 221.1, 216.3

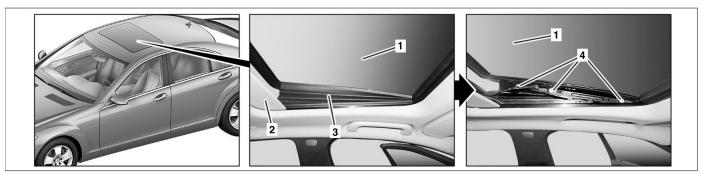

P77.20-2588-07

Shown on model 221.0

- 1 Tilting/sliding roof cover
- 2 Sliding roof lining

Rubber bellows

4 Bolts

XX	Remove/install		
⚠ Danger!	Risk of injury caused by fingers being pinched or crushed when removing, installing or aligning hoods, doors, trunk lids, tailgates or sliding roof.	Keep body parts and limbs well clear of moving parts.	AS00.00-Z-0011-01A
1	Move tilting/sliding roof cover (1) to pop-up position		
2	Completely open sliding roof lining (2)		
3	Remove rubber bellows (3) on left and right on sliding/pop-up roof cover (1)	© Carefully loosen rubber bellows (3) from lower arrest and then remove from sliding/pop-up roof cover (1), otherwise the rubber bellows (3) can be damaged. i Observe installation position of rubber bellows (3). Do not mix up rubber bellows (3).	
4	Close tilting/sliding roof panel (1)		
5	Unscrew bolts (4) on left and right from tilting/sliding roof cover (1)	i Installation: Adjust tilting/sliding roof cover (1).	AR77.20-P-1100SX
6	Remove tilting/sliding roof cover (1)	Carefully remove tilting/sliding roof cover (1); paint on vehicle roof can be damaged. Do not actuate tilting/sliding roof when tilting/sliding roof cover (1) is removed; rain trough can be damaged.	
7	Install in the reverse order		