
AR91.12-F	P-1020SY	Remove/install rear seat cushion	20.10.05
MODEL		ODE (223) Rear bench seat with electrically adjustable outer seats with PRE-SAFE ter seats and outer head restraints	positioning
MODEL	221.1 except CODE (223) Rear bench seat with electrically adjustable outer seats with PRE-SAFE positioning function outer seats and outer head restraints except CODE (224) Rear individual seat design		

- Rear seat cushion
- 1 2 3 4 Clamp
- . Retaining clip
- Hook

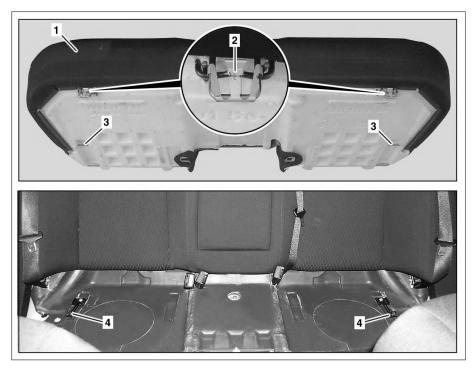

P91.12-2931-06

XX	Remove/install	
	Move both front seats forwards	
2		 Remove rear seat cushion (1) from the vehicle carefully, to avoid damage to components in the vehicle interior or on the rear doors. Installation: Ensure that the retaining brackets (3) engage in the hooks (4).
3	Install in the reverse order	