


 



 
 






P91.40-2628-09

1 **Automatic belt retractor**
 2 **Bolt**
 3 **Bolt**
 4 **Bolt**

5 **Electrical connector**
 6 **Seat belt**
 7 **Seat belt guide**

R12/6x1 Left rear ETR squib connector
R12/7x1 Right rear ETR squib connector

 	Remove/install		
 Danger!	Risk of injury caused by performing testing or repair work on airbag or emergency tensioning retractor units.	Store airbag units with deployment side facing up; do not expose to temperatures greater than 100 °C. When working on these units, disconnect the power supply.	AS91.00-Z-0001-01A
 Danger!	Risk of injury caused by release of spring in the automatic belt retractor is released.	Never disassemble automatic belt retractors.	AS91.00-Z-0002-01A
	Notes on performing repair, body work and welding on vehicles with airbags and ETR units		AH91.00-P-0002-01M
	Assessment of airbag and belt tensioner units in accident vehicles		AH91.00-P-0006-01B
	Legal requirements on handling and storing airbags and emergency tensioning retractor units		AH91.00-P-0004-01A
1	Remove paneling on C-pillar	Vehicles without code (Z07) Top protection Vehicles with code (Z07) Top protection	AR68.30-P-4490SX AR68.30-P-4490SXS
2	Connect ground line to starter battery and to on-board electrical system battery		AR54.10-P-0003SX
3	Remove rear shelf	Vehicles without code (Z07) Top protection Vehicles with code (Z07) Top protection	AR68.30-P-4580SX AR68.30-P-4580SXS
4	Remove bolt (2) from belt guide (7)		*BA91.40-P-1009-01O
5	Remove bolt (3) on seat belt guide bracket		*BA91.40-P-1005-01O
6	Remove bolt (4) on automatic belt retractor (1)		*BA91.40-P-1006-01O
7	Detach electrical connector (5) and left rear ETR squib connector (R12/6x1) or right rear ETR squib connector (R12/7x1) on automatic belt retractor (1)		
8	Detach seat belt (6) from belt guide (7) and remove automatic belt retractor (1)	 Installation: Observe different versions for left and right automatic belt retractors (1), do not install seat belt (6) when twisted. Insert catch (arrow) on automatic belt retractor (1) correctly into C-pillar.	

 OS		If the automatic belt retractor (1) is replaced, the faulty automatic belt retractor (1) must be disposed of properly. Refer to: ↓ Notes on disposing of airbag and emergency tensioning retractor units	OS91.00-P-0001-01A
9	Install in the reverse order		
 AD 10.1	Check supplemental restraint system (SRS) with STAR DIAGNOSIS Connect STAR DIAGNOSIS and read out fault memory	After replacing the automatic belt retractor (1).	AD00.00-P-2000-04A

Nm Seat belts/emergency tensioning retractors

Number	Designation	Model 221
BA91.40-P-1005-01O	Screw in rear upper belt guide fitting	Nm 32
BA91.40-P-1006-01O	Bolt to rear inertia reel	Nm 32
BA91.40-P-1009-01O	Bolt for automatic belt run control at rear	Nm 8