



MODEL 222.0/1

- 1 Emergency spare tire cover
- 1.1 Snap hook
- 1.2 Tie-down eye
- 2 Fastening strap
- 3 Trunk floor lining

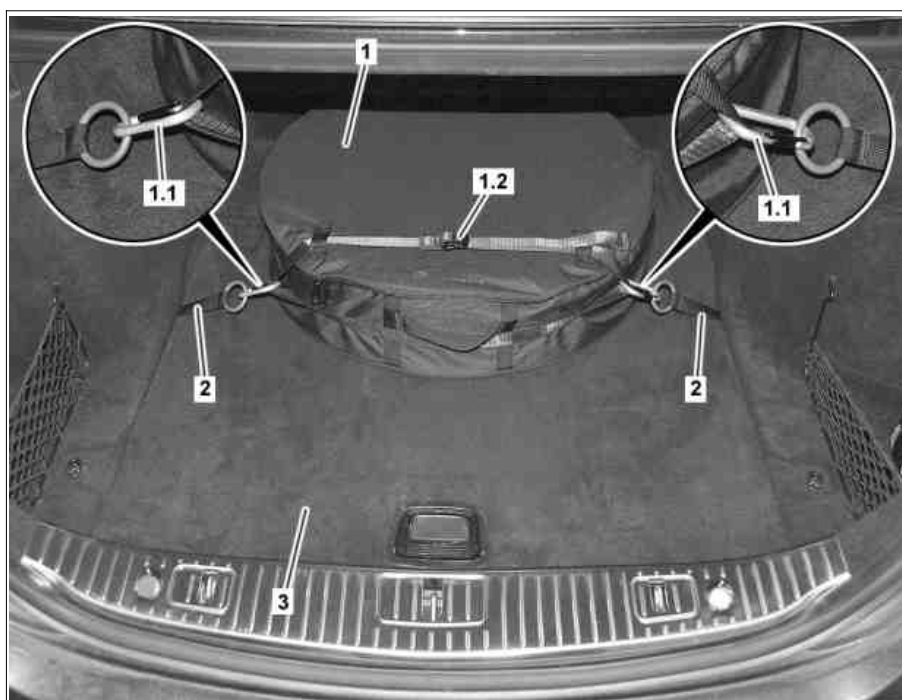

P40.10-6569-06

- 2 Fastening strap
- 2.1 Fastening shackle
- 2.2 Mounting eye
- 4 Screw

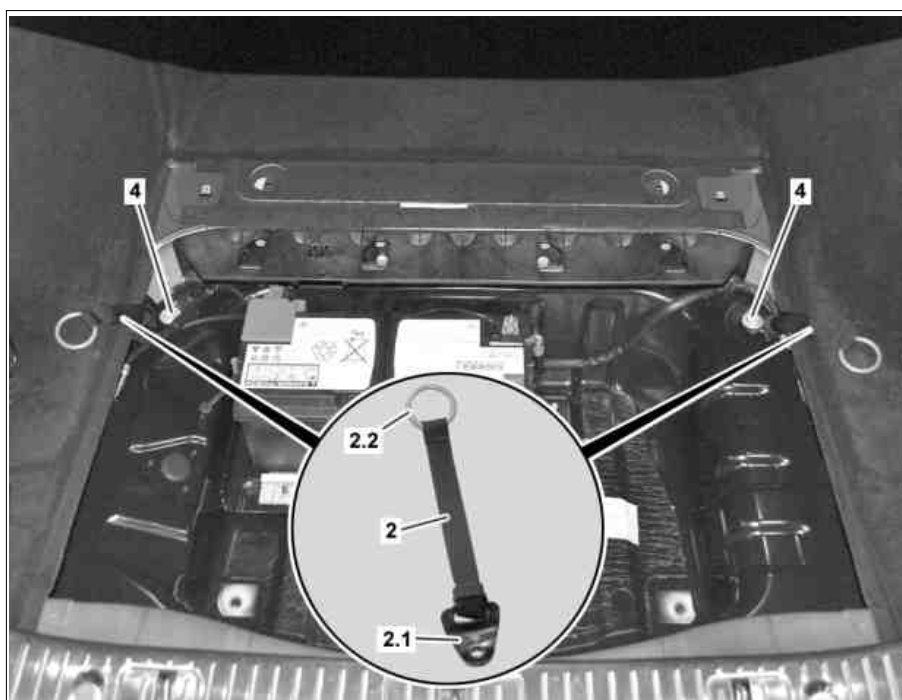

P40.10-6570-06

✕	Remove		
1	Remove trunk floor lining (3)		
✕ AR			AR68.30-P-4600LF
2	Remove spare tire well paneling		
3	Remove bolts (4)		
✕	Install		
4	Attach one fastening strap (2) to one mounting bracket (2.1) each		
5	Tighten mounting bracket (2.1) at right and left in the spare wheel well with screws/bolts (4)		

6	Keep fastening strap (2) and mounting eye (2.2) at right and left at panels on the side in the trunk		
7	Install spare wheel well panel		
8	Install trunk floor lining (3)		AR68.30-P-4600LF
9	Insert emergency spare tire into emergency spare tire cover (1) and close zipper of cover (1)		
10	Place emergency spare tire with cover (1) in the trunk as shown		
11	Hook snap hook (1.1) at right and left into mounting eyes (2.2)		
12	Lash down emergency spare tire cover (1) with tie-down eye (1.2)		
13	Document retrofitted equipment via vehicle documentation (VeDoc)	i Attach note "Emergency spare tire retrofitted according to AZ40.10-P-0005LF" under field organization texts for design group 40.	

Parts ordering note

Part no.	Designation	Quantity
KG 98 (siehe EPC)	Scope of supply for emergency spare tire	1